


TVA Flowmeter commissioning flow chart

IM-P192-03
MI Issue 1

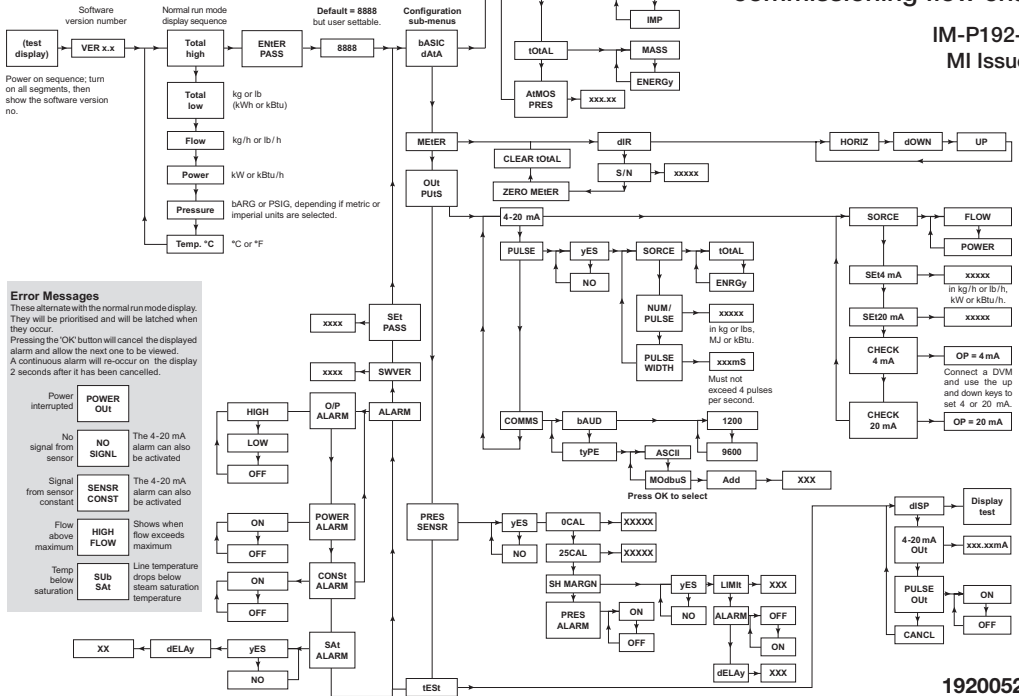

Error Messages

These alternate with the normal run mode display. They will be prioritised and will be latched when they occur. Pressing the 'OK' button will cancel the displayed alarm and allow the next one to be viewed. A continuous alarm will re-occur on the display 2 seconds after it has been cancelled.

Power interrupted	POWER OUT	
No signal from sensor	NO SIGNL	The 4-20 mA alarm can also be activated
Signal from sensor constant	SENSR CONST	The 4-20 mA alarm can also be activated
Flow above maximum	HIGH FLOW	Shows when flow exceeds maximum
Temp below saturation	Sub SAT	Line temperature drops below steam saturation temperature