


## EP6/PP6 Mounting Kit Assembly

Hardware identification		
A	Bracket	
C	Lever 20-30	EY3/PY3 only
D	Lever 50-80	EY4/PY4 only
H	Locator 20-30	EY3/PY3 only
K	Locator 50-70	EY4/PY4 only
N	Pin	
P	Spring	
Q	Spacer	PY3/PY4 only
R	U-bolt	UBC only
S	M8 cap head screw	
T	M8 hex head screw	
U	M8 spring washer	
V	M8 plain washer	
W	M8 nut	
X	M6 cap head screw	
Y	M5 nut	
Z	Nut, spring washer and screw supplied with EP6/PP6 positioner	

**Note :**  
Locator markings are specific to Spirax Sarco actuators.  
For third party products, ignore locator marks and position pin to best match appropriate stroke mark on lever

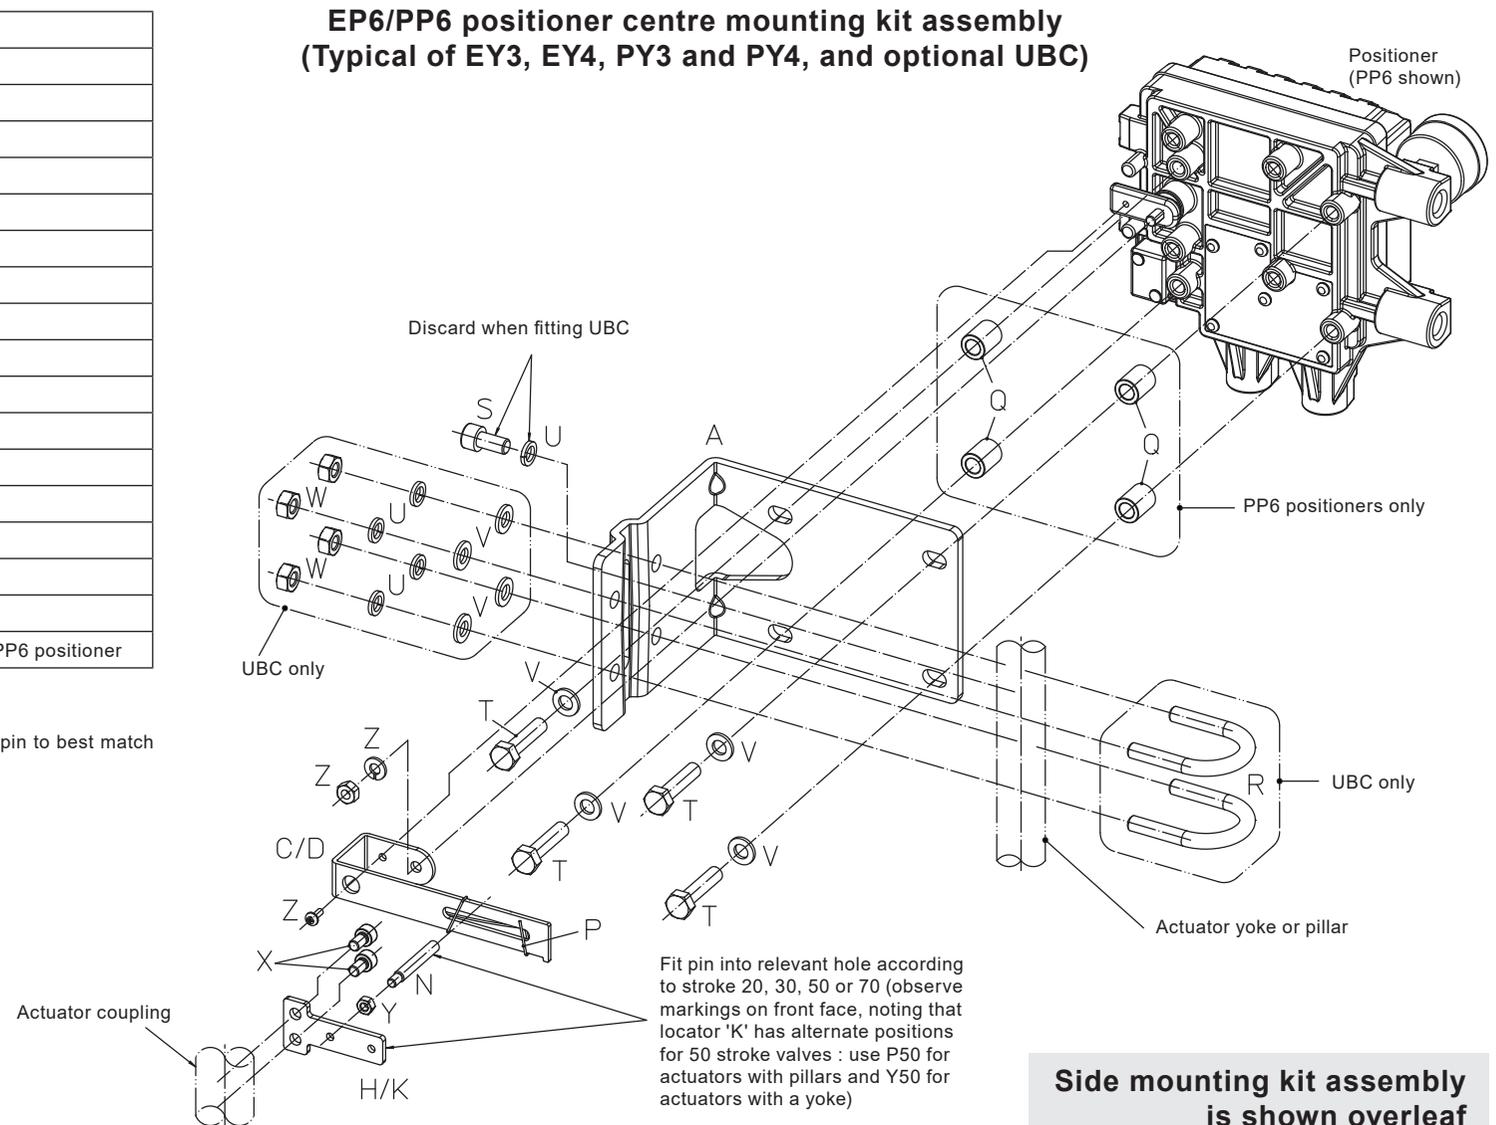


Hardware identification		
B	Bracket	
E	Lever 10-40	UY3 only
F	Lever 30-70	UY1 only
G	lever 60-100	UY2/UY4 only
J	Locator 65-70-75	UY2 only
L	Locator slotted	UY1/UY2/UY3
N	Pin	
P	Spring	
R	U-bolt	UBC only
S	M8 cap head screw	
T	M8 hex head screw	
U	M8 spring washer	
V	M8 plain washer	
W	M8 nut	
X	M6 cap head screw	
Y	M5 nut	
Z	Nut, spring washer and screw supplied with EP6/PP6 positioner	

**Note :**  
 Locator markings are specific to Spirax Sarco actuators.  
 For third party products, ignore locator marks and position pin to best match appropriate stroke mark on lever

Slotted locator alignment (UY1/UY3/UY4)								
Valve >	C series		QL			Spira-trol		
			DN15- DN100	DN125- DN200		DN15- DN100		DN125- DN300
Stroke (mm)	38	50	20	30	50	20	30	70
Actuator	PN1600	A~R C~R						
	PN3000		D~L	A~L		D~L	A~L	
	PN4000		D~L	A~L		D~L	A~L	
	PN5000		D~L	A~L	Q~R	D~L	A~L	
	PN6000		D~L	A~L	Q~R	D~L	A~L	
	PN9100		D~L	A~L		D~L	A~L	
	PN9200		D~L	A~L		D~L	A~L	
	PN9300		D~L	A~L		D~L*	A~L	
	PN9400				B~R			E~R
	TN2200				B~R			E~R
TN2300				B~R			E~R	
TN2400				B~R			E~R	

^  
\*

## EP6/PP6 positioner side mounting kit assembly (Typical of UY1, UY2, UY3 and UY4, and optional UBC)

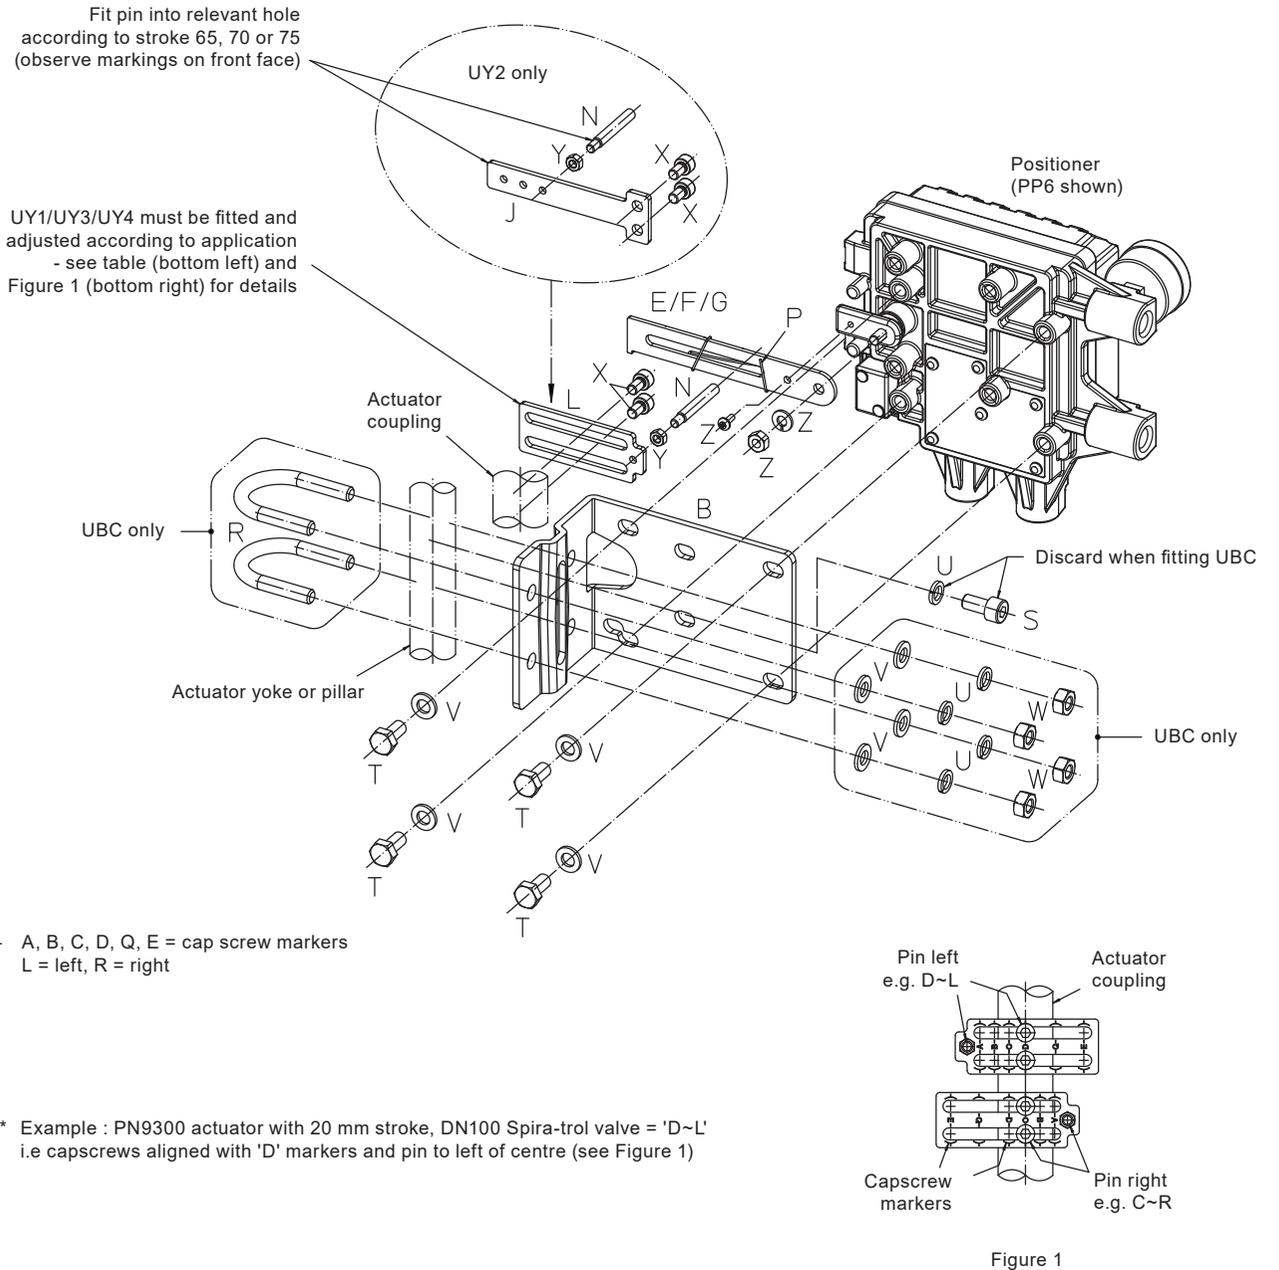

### EP6/PP6 Mounting Kit Assembly

