

Pressure Power Pump Flow Counter Installation and Maintenance Instructions

Description

For fitting to any size of pressure power pump.

Pump capacities

Pump	Litres/stroke	Gallons/stroke
PPEC	15	3.3
PPC	27	5.9
PPF	32	7.0

Installation

The flow counter should be fitted to the cover of a Spirax Sarco pressure powered pump which is provided with a tapped boss. Always fit ring syphon between counter and pump.

For ease of reading the counter can, if necessary, be mounted at a higher level and be connected to the pump cover by a length of 1/2" pipe.

An isolating valve can be fitted between the counter and the pump cover.

