


spirax /sarco

Capacity Charts for HM Series and 200 Series Inverted Bucket Steam Traps


Capacities for the HM Series

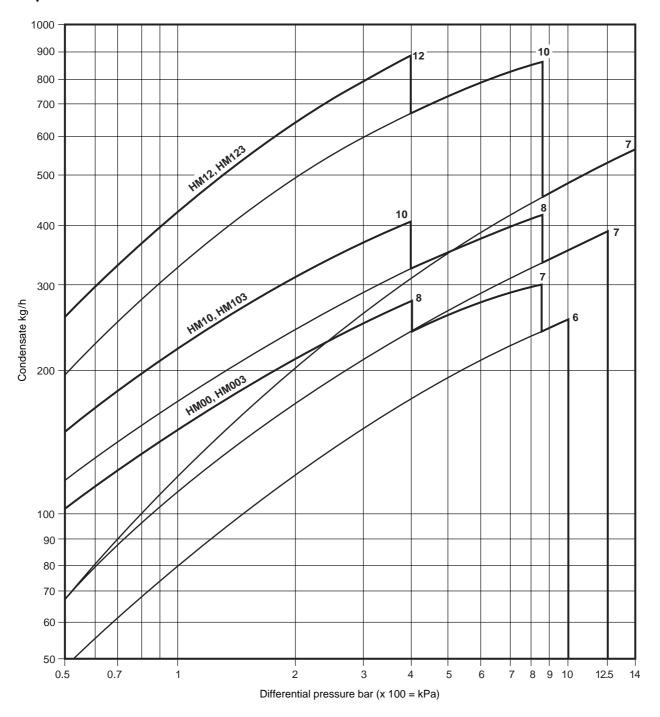

Note: Traps should be selected for the most appropriate working pressure differential and not on the basis of load.

For further technical information for this product see TI-S03-02

Capacities for the 200 Series

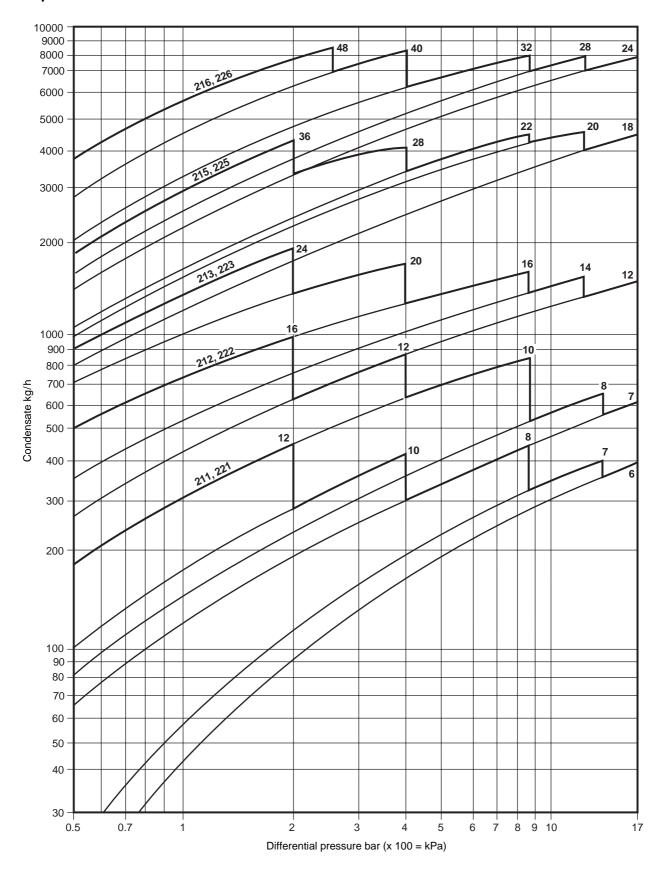

Note: Traps should be selected for the most appropriate working pressure differential and not on the basis of load.

For further technical information for this product see TI-S03-03