




Installation and Maintenance Instructions

IM-6-808A-US

July 2006

### USTS Lock-Out / Tag-Out Box

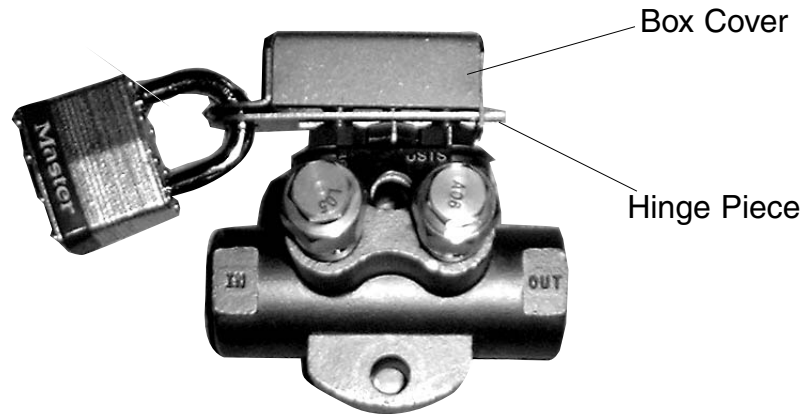

#### Installation:

The lock-out / tag-out box must be installed on either the isolation valves or the blowdown valves and requires a pad lock supplied by the customer. If both lock-out of isolation and blowdown valves is required two lock-out / tag boxes would be required.

#### Assembly of lock-out / tag-out box to USTS valves

1. Slide hinge piece under the valve screw head.
2. Assemble box cover allowing hinge tabs to stick through slot in box cover.
3. Slide pad lock hasp through box cover and hinge and lock pad lock.

For additional technical information, contact:  
Spirax Sarco Applications Engineering Department  
Toll Free 1-800-833-3246



Spirax Sarco, Inc. • 1150 Northpoint Blvd. • Blythwood, SC 29016  
Phone: 803-714-2000 • Fax 803-714-2222 • www.spiraxsarco.com/us




Installation and Maintenance Instructions

IM-6-808A-US

July 2006

### USTS Lock-Out / Tag-Out Box

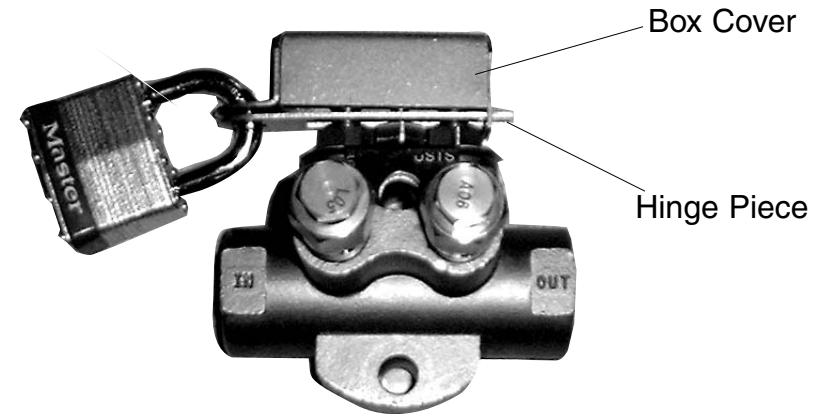

#### Installation:

The lock-out / tag-out box must be installed on either the isolation valves or the blowdown valves and requires a pad lock supplied by the customer. If both lock-out of isolation and blowdown valves is required two lock-out / tag boxes would be required.

#### Assembly of lock-out / tag-out box to USTS valves

1. Slide hinge piece under the valve screw head.
2. Assemble box cover allowing hinge tabs to stick through slot in box cover.
3. Slide pad lock hasp through box cover and hinge and lock pad lock.

For additional technical information, contact:  
Spirax Sarco Applications Engineering Department  
Toll Free 1-800-833-3246



Spirax Sarco, Inc. • 1150 Northpoint Blvd. • Blythwood, SC 29016  
Phone: 803-714-2000 • Fax 803-714-2222 • www.spiraxsarco.com/us