

spirax sarco

Spare Parts Guide 6" Main Valves

SPARE PARTS – MAIN VALVE

| | |
|---|-----------|
| Main Valve Spring | O, S |
| & Lower Diaphragm Cover Gaskets | |
| Diaphragm Plate & Set Screws | K, D |
| Transmission Tubing with Fittings | U |
| Diaphragms (2 per set) | L |
| Gasket Kit | C, S, W |
| Head, Stem & Seat Assembly (specify regular or reduced part "S" valve) | P, Q, C |
| Screen Assembly | I, J |
| Cover Bolt Kit | B |
| Diaphragm Case Bolt Kit | G, H |
| Rebuild Kit | BCLOPQSUW |
| Pilot Platform: | X |

HOW TO ORDER

Always order spares by using the description given in the first column under Spare Parts, stating the valve size and material.

Example: 1 – Diaphragm Plate & Set Screws for 6" Spirax Sarco 25T Cast Iron Reducing Valve

MAINTENANCE

See installation and maintenance instructions supplied with each valve, copies are available on request.

Main valve seat in 6" regulator is field replaceable.

Please consult factory for seat removal tool. To retain tight shut off, minor wear can be corrected by lapping with suitable grinding compound.

