spirax sarco

TI-P063-02-US Issue 1

Balanced Pressure Thermostatic Steam Trap T250

Description

The T250 has a welded stainless steel element, which is self-adjusting over the entire operating pressure range and will discharge condensate at approximately 20 °F (11 °C) below saturated steam temperature.


	T250			
Model	Angle	Straightway		
РМО	250 psi g			
Sizes	½", ¾" and 1"	½" and ¾"		
Connections	NPT			
Construction	Cast Iron Body and Cover Stainless Steel Internals			

Limiting operating conditions

РМО	Maximum operating pres	sure 250 psi g (17 bar g)
Maxim	um operating temperature	Saturated steam temperature

Pressure shell design conditions


РМА	Maximum allowable pressure	250 psi g/up to 450 °F (17 bar g/up to 232 °C)
ТМА	Maximum allowable temperature	450 °F/0-250 psi g (232 °C/0-17 bar g)

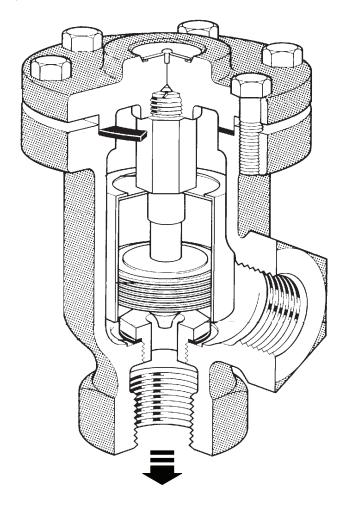

Typical applications

Hospital, laundry and kitchen equipment, high capacity process equipment, outdoor applications subject to freezing, applications requiring high air venting capacity on initial start up.


Materials

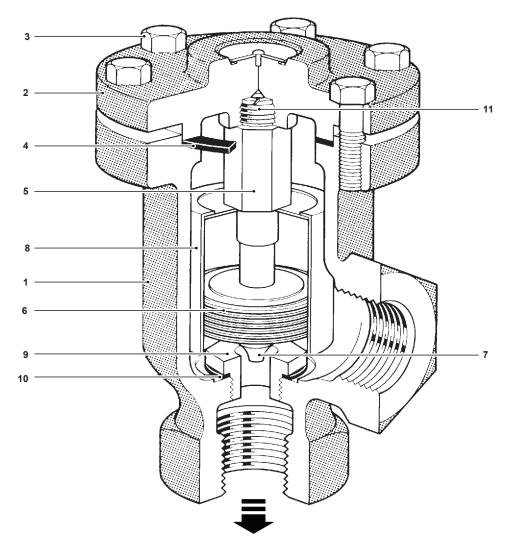

Body Cap Cap Screws Cap Gasket	Cast Iron Cast Iron Steel Stainless Steel Clad Non-Asbestos Fill	
Cap Screws	Steel	ASTM A126 CL B ASTM A449
•		ASTM A449
Cap Gasket	Stainless Steel Clad Non-Ashestos Fill	
	Claimede Clear Glad Hell / legestee 1 iii	
Element Assembly	Stainless Steel	
Bellows	Stainless Steel	
Valve Head	Stainless Steel	
Bellows Shield (1" only)	Stainless Steel	
Valve Seat	Stainless Steel	
Valve Seat Gasket	Stainless Steel Clad Non-Asbestos Fill	
Lockwasher	Stainless Steel	
Plug (Stwy. only)	Forged Steel	
	Element Assembly Bellows Valve Head Bellows Shield (1" only) Valve Seat Valve Seat Gasket Lockwasher	Element Assembly Stainless Steel Stainless Steel Valve Head Stainless Steel Stainless Steel Stainless Steel Valve Seat Stainless Steel Valve Seat Stainless Steel Valve Seat Gasket Stainless Steel Clad Non-Asbestos Fill Lockwasher Stainless Steel

С **Angle** D С

Straightway

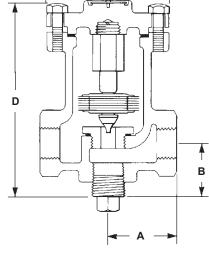

	Size	Α	В	С	D	Weight
	1/2"	1.75	1.75	3.12	4.56	3.5 lb
		(44)	(44)	(79)	(116)	(1.6 kg)
	3/11	1.75	1.75	3.12	4.56	3.5 lb
Angle	3/4"	(44)	(44)	(79)	(116)	(1.6 kg)
	1"	2.12	2.25	3.9	5.37	6.0 lb
	1	(54)	(57)	(99)	(136)	(2.7 kg)
	4/1	1.75	1.75	3.12	5.37	4.3 lb
Ctual abturns	1/2"	(44)	(44)	(79)	(136)	(1.9 kg)
Straightway	3/4" —	1.87	1.75	3.12	5.37	4.3 lb
		(47)	(44)	(79)	(136)	(1.9 kg)

Capacities Hot Condensate lb/h

Inlet P	ressure			
psi g	bar g	1/2"	3/4"	1"
1	.07	620	850	1300
2	.14	820	1200	1750
5	.34	1200	1650	2600
10	.70	1580	2225	3500
15	1.0	1800	2650	4200
20	1.4	2100	2950	4600
30	2.1	2450	3500	5500
40	2.8	2750	4000	6200
50	3.4	3100	4400	6850
60	4.1	3300	4700	7250
75	5.2	3650	5050	8000
100	6.9	4200	5750	9000
125	8.6	4400	6150	9650
150	10.3	5000	7000	11000
175	12.1	5275	7450	11750
200	13.8	5600	7800	12100
225	15.4	5900	8200	12500
250	17.2	6000	8500	13500
Orifice Size :	=	.375"	.438"	.500"

Discharge Capacities shown were obtained from tests using hot condensate approximately 20 °F (11 °C) below Saturated Steam temperature.

When condensate temperature is below 200 °F (93 °C), discharge capacity is from two to three times greater than shown above.

Sample specification

Steam traps shall be balanced pressure thermostatic types, self-adjusting to all pressures within their operating range. Bodies to be of heavy cast iron with NPT connections. Thermostatic elements shall be of precision welded stainless steel construction. All internals to be stainless steel and shall be replaceable without disturbing the piping connections.

Installation

A pipeline strainer should be installed ahead of any steam trap to protect the valve and seat from dirt and scale. Full port isolating valves should be placed to permit servicing. The trap should be installed below the drainage point of the equipment with a collecting leg before the trap. For best operation, the bellows should be in a horizontal position as shown. For a freeze-resistant installation, inlet piping must be pitched toward the trap for gravity flow, and the trap outlet must be free of any piping. See installation instructions #250-D8.

Maintenance

This product can be maintained without disturbing the piping connections. Complete isolation from both supply and return line is required before any servicing is performed.

The trap should be disassembled periodically for inspection and cleaning of the valve head and seat.

Worn or damaged parts should be replaced using a complete element set.

Complete installation and maintenance instructions are given in IMI 2.004, which accompanies the product.

Spare parts

Available spare parts are shown in heavy outline. Angle and straightway traps accept the same spare parts.

Element Set	A, B, C, D, E
Cap Gasket	В

