# TFA Flowmeter
## commissioning flow chart

IM-P193-04
MI Issue 1

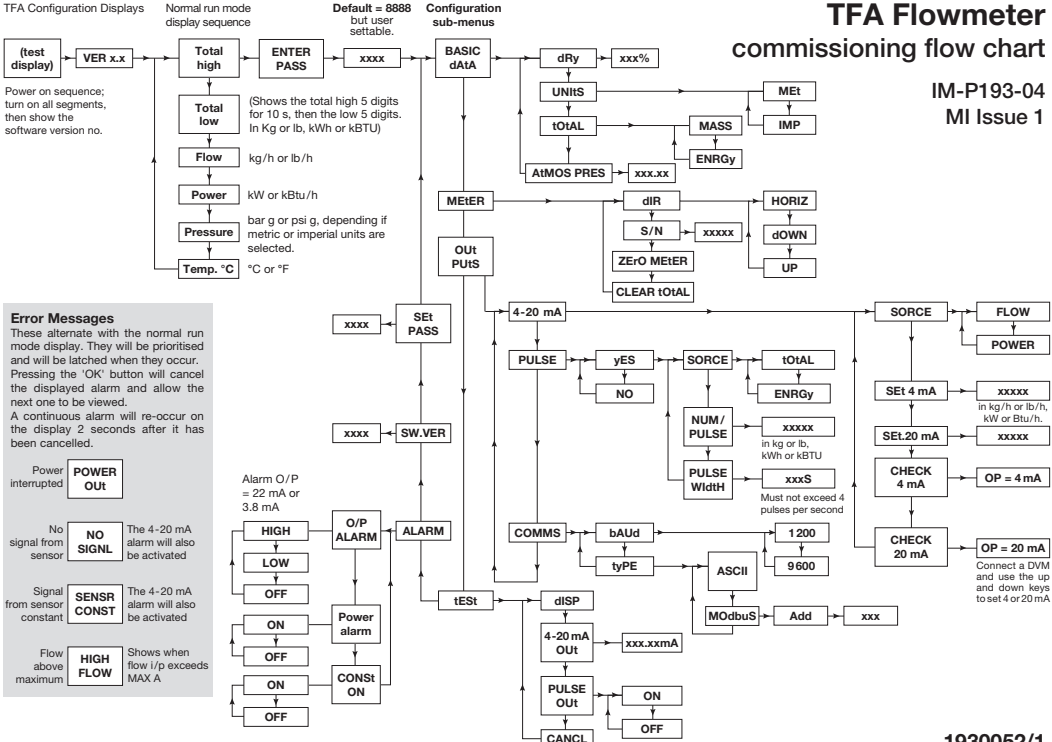


### Error Messages

These alternate with the normal run mode display. They will be prioritised and will be latched when they occur. Pressing the 'OK' button will cancel the displayed alarm and allow the next one to be viewed.

A continuous alarm will re-occur on the display 2 seconds after it has been cancelled.

| | | |
|---|---|---|
| Power interrupted | POWER OUt | |
| No signal from sensor | NO SIGNL | The 4-20 mA alarm will also be activated |
| Signal from sensor constant | SENSR CONST | The 4-20 mA alarm will also be activated |
| Flow above maximum | HIGH FLOW | Shows when flow i/p exceeds MAX A |

1930052/1