TI-P405-45 FMM Issue 4



## ABV21i and ABV40i Air Actuated Boiler Blowdown Valves

## **Description**

The Spirax Sarco ABV21i and ABV40i one piece end entry, reduced bore ball valves are fitted with 90° rotary spring return pneumatic actuator, for boiler blowdown duties.

They are used in conjunction with a Spirax Sarco blowdown timer to provide timed control of bottom blowdown, ensuring that the recommended boiler blowdown cycles occur with minimum heat loss, avoiding duplication or omission.

The pneumatic actuator, (which can also be operated with other noncorrosive gases), moves through 90° to open the valve, and has a spring return fail-close operation.

A switch box is mounted on the actuator, and either or both microswitches may be wired to a Building Management System if

Note: The BT1050 blowdown timer uses one switch only to indicate 'valve fully closed' or 'valve not fully closed' positions, and does not indicate that the valve has opened fully.

A solenoid valve is required, which may be directly mounted to the NAMUR (VDI/VDE 3845) interface on the actuator.

A suitable solenoid valve may be selected from the Spirax Sarco MV range. Alternatively, an air supply may be connected directly to the actuator port 'A' (1/4" BSP), where it is necessary to install the solenoid valve remote from the actuator.

A standard 1/4" BSP 3-way solenoid valve may also be used.


## 3-port/2-way NAMUR mounting solenoid types:

MV11 - 230 Vac, MV12 - 110 Vac, MV13 - 24 Vac, MV14 - 24 Vdc

The ABV21i and ABV40i must be installed with the flow in the direction of the arrow on the body.

## **Principal features:**

- Automatic timed blowdown minimises wasted heat.
- Suitable for boiler pressures up to 17.25 bar g (250 psi g).
- Spring return for fail-safe operation.
- Pneumatic actuator for fast response.

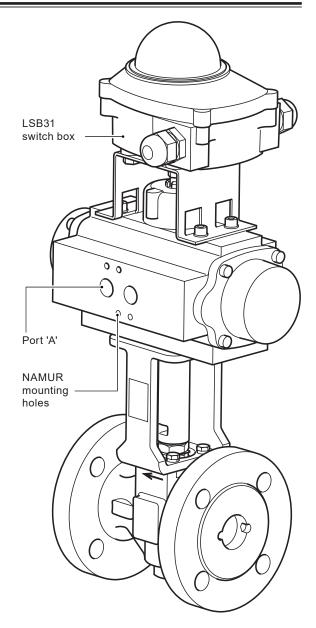

## **Standards**

These products comply with the requirements of the European Pressure Equipment Directive 2014/68/EU and carries the 🅻 🖡 mark when so required.



ISO mounting in accordance with ISO 5211.

Antistatic device complying with ISO 7121 and BS 5351.

## Certification

These products are available with certififcation to EN 10204 3.1.

Note: All certification/inspection requirements must be stated at the time of order placement.


**Sizes and pipe connections**DN25, DN32, DN40, DN50 and DN65 (1", 1½", 1½", 2" and 2½")
Flanged PN40 (F4), PN40 (BS) or ASME B 16.5 Class 300.

	Flange	Face-to-face	Flange thickness
Available flance entions	PN40 (F4)	DIN 3002 F4	EN 1092 Part 1
Available flange options	PN40 (BS)	BS 2080	EN 1092 Part 1
	ASME 300	ASME B 16.10	ASME B 16.5

## Technical data

Operating time (full stroke)			0.25 - 0.6 seconds
Operating media			Clean compressed air Non-corrosive gas
	DN25 (1")	BVA315S/14	0.0002 (N)m³/ stroke (0.0071 ft³/stroke)
	DN32 (1½")	BVA320S/14	0.0006 (N)m³/ stroke (0.0212 ft³/stroke)
Compressed air consumption @ 6 bar g (87 psi g)	DN40 (1½") DN50	BVA325S/14 actuator	0.0008 (N)m³/ stroke (0.0283 ft³/stroke)
	(2")		
	DN65 (2½")	BVA330S/14 actuator	0.0011 (N)m³/ stroke (0.0388 ft³/stroke)
LSB31 switch rating			10 A 250 Vac
Protection rating			IP67
Switch sensor			Mechanical 2 - SPDT

## Pressure / temperature limits - ABV21i

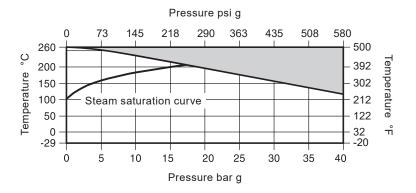


The product  $\boldsymbol{must}$   $\boldsymbol{not}$  be used in this region.

## Valve

vaive		
Body design conditions		PN40
PMA Maximum allowable pressure	40 bar g @ 120 °C	580 psi g @ 248 °F
TMA Maximum allowable temperature	260 °C @ 0 bar g	400 °F @ 0 psi g
Minimum allowable temperature	-29 °C	-20 °F
PMO Maximum operating pressure for saturated steam service	17.25 bar g	250 psi g
TMO Maximum operating temperature	260 °C @ 0 bar g	400 °F @ 0 psi g
Minimum operating temperature (Note: For lower operating temperatures consult Spirax Sarco)	-29 °C	-20 °F
ΔPMX Maximum differential pressure is limited to the PMO		
Designed for a maximum cold hydraulic test pressure of:	60 bar g	870 psi g
Actuator		
Maximum ambient temperature	80 °C	176 °F
Minimum ambient temperature	0 °C	32 °F
Maximum air supply pressure	8 bar g	116 psi g
Minimum air supply pressure	Depend	s on operating conditions
MV series solenoid		
Maximum ambient temperature	50 °C	122 °F
Minimum ambient temperature	0 °C	32 °F

## Pressure / temperature limits - ABV40i

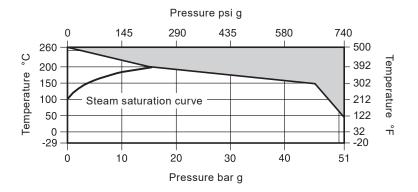

The product **must not** be used in this region.

## Valve


	design conditions			
51 bar g @ 38 °C	Maximum allowable pressure			
260 °C @ 0 bar g	Maximum allowable temperature			
-29 °C	num allowable temperature			
17.25 bar g	Maximum operating pressure for saturated steam service			
260 °C @ 0 bar g	Maximum operating temperature			
-29 °C	num operating temperature e: For lower operating temperatures consult Spirax Sarco)			
	X Maximum differential pressure is limited to the PMO			
76.5 bar g	Designed for a maximum cold hydraulic test pressure of:			
	ator			
80 °C	mum ambient temperature			
0 °C	num ambient temperature			
8 bar g	mum air supply pressure			
Depends	Minimum air supply pressure			
	series solenoid			
50 °C	mum ambient temperature			
0 °C	Minimum ambient temperature			
ds	260 °C @ 0 bar g  -29 °C  17.25 bar g  260 °C @ 0 bar g  -29 °C  76.5 bar g  80 °C  0 °C  8 bar g  Depend			

## Valve coefficients

Size	DN25 (1")	DN32 (11/4")	DN40 (1½")	DN50 (2")	DN65 (2½")
Kv value	30	40	81	103	197

For conversion: Cv (UK) = Kv x 0.963 Cv (US) = Kv x 1.156

## **Materials**

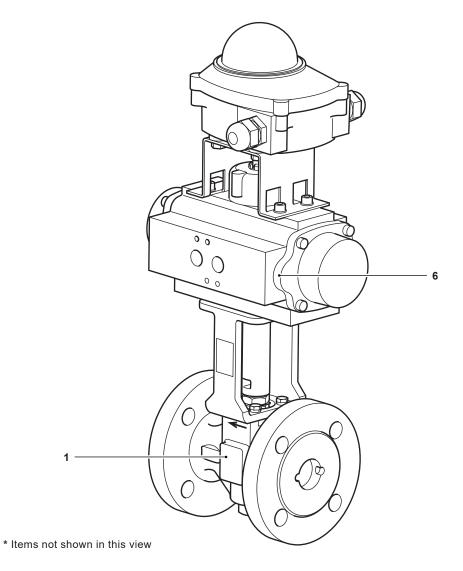

	No.	Part		Materials				
	1 Body and insert 2 * Stem seals 3 * Vented ball			Zinc plated carbon steel	ASTM A216 WCB			
				Antistatic R-PTFE				
Valve				Austenitic stainless steel	AISI 316			
			DN65 (2½")	Austenitic stainless steel	AISI 316			
	4 *	Stem	DN25 - DN50 (1" - 2")	Martensitic stainless steel	AISI 420			
	5 *	Seats		Carbon and graphite reinforced PTFE	PDR 0.8			
	6	Body, piston and	end caps	Aluminium - anodised				
Actuator	tuator 7 * Pinion		Carbon steel - nickel plated					
	8 *	'O' ring seals		Nitrile rubber				


## How to specify


Air actuated ball valve, DN40, PN40 with carbon reinforced seats, 90 degree rotary pneumatic actuator and switch box. NAMUR compatible solenoid valve 220 / 240 Vac.

## How to order

**Example:** 1 off Spirax Sarco DN40 ABV21i air actuated boiler blowdown valve having PN40 (F4) flanged connections plus 1 off MV11 solenoid valve 220 / 240 Vac.

## Dimensions/weights (approximate) in mm (in) and kg (lb)

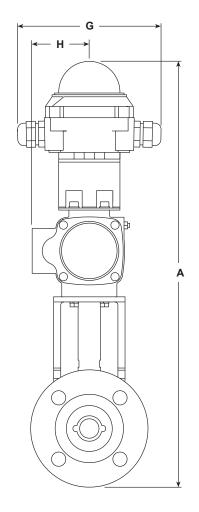

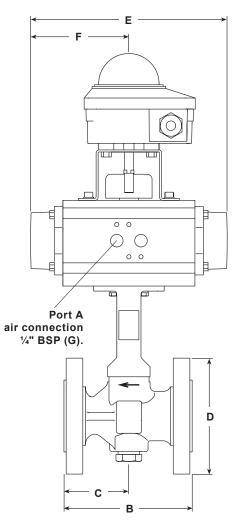

Valve size	Actuator type	Flange	Α	В	С	D	Е	F	G	Н	Weight
		PN40 (F4)	447 (40 4)	125 (4.9)	63 (2.5)	445 (4.5)	5) 196 (7.7)			56 (2.2)	6.7 (14.8)
DN25 (1")	BVA3166/1/	PN40 BS	417 (16.4)	4CF (0 C)	102 (4.4)	115 (4.5)		98 (3.9)			6.5 (14.3)
(- /		Class 300	421 (16.6)	165 (2.6)	103 (4.1)	124 (4.9)					6.8 (15)
		PN40 (F4)	450 (40)	130 (5.1)	65 (2.6)	140 (5.5)	217 (8.5)		140 (5.5)	66 (2.6)	9.2 (20.3)
DN32 (1¼")	BVA320S/14	PN40 BS	456 (18)	470 (7)	113 (4.4)	140 (5.5)		108.5 (4.3)			9.6 (21.2)
(3,1,)		Class 300	450 (17.7)	178 (7)	65 (2.6)	134 (5.3)					9.4 (20.7)
	DN40 (11/6") BVA325S/14	PN40 (F4)	475 (40 7)	140 (5.5)	70 (2.8)	150 (5.9)	1	129 (5.1)		71 (2.8)	11.7 (26)
DN40 (1½")		PN40 BS	475 (18.7)	400 (7.5)	400 (4 =)	150 (5.9)					12.2 (26.9)
(1/2)		Class 300	478 (18.8)	190 (7.5)	120 (4.7)	156 (6.1)					13.0 (28.7)
		PN40 (F4)		150 (5.9)	75 (3)	165 (6.5)				71 (2.8)	14.1 (31)
DN50 (2")	BVA325S/14	PN40 BS	488 (19.2)	216 (8.5)	444 (5.0)	405 (0.5)					15.0 (33)
(- /		Class 300	1	216 (8.5)	141 (5.6)	165 (6.5)					15.1 (33.1)
		PN40 (F4)	500 (00 0)	170 (6.7)	91 (3.6)	185 (7.3)	299 (11.8)	149.5 (5.9)		78 (3.1)	20.7 (45.6)
DN65 (2½")	BVA330S/14	PN40 BS	530 (20.9)	044 (0.5)	100 (0.4)	185 (7.3)	299 (11.8)				22.2 (48.9)
( ,- )		Class 300	533 (21)	241 (9.5)	162 (6.4)	191 (7.5)					23.3 (51.1)

## **Spare parts**

The spare parts available are detailed below. No other parts are available as spares.


Please note: There are no spares available for the switch box.

To ensure correct operation and maintain the warranty, use only Spirax Sarco original parts.

Before actioning any maintenance programme observe the 'Safety Information' in Section 1 of IM-P405-46 supplied with the unit.

## **Actuator**

# Spare parts for the BVA300S/14 The available spare parts for the BVA300S/14 are listed on pages 8 and 9. No other parts are available as spares

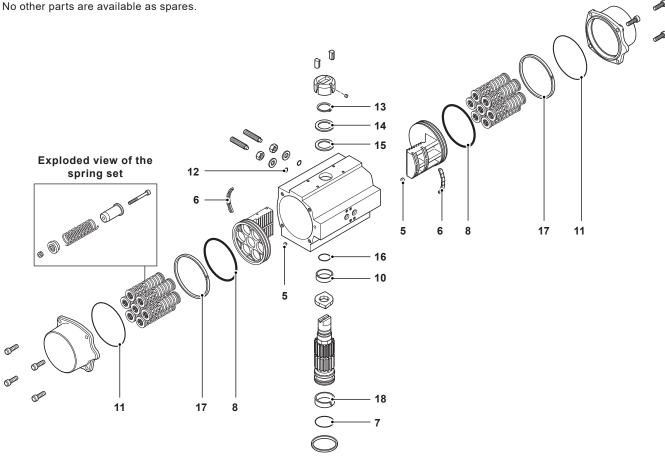

## Spare parts

The spare parts available are detailed below. No other parts are supplied as spares.

## Available spares

	'O' rings set (NBR)	7, 8, 11, 12, 16
BVA300 series maintenance kit	Pinion washers	13, 14, 15
	Others	5, 6, 10, 17, 18

## How to order spares

Always order spares by using the description given in the column headed 'Available spares' and state the nomenclature of the pneumatic actuator that they are intended for.

Note: all the spares mentioned above are sold together in one spare part kit.

Example: 1 - BVA300 series maintenance kit with 'O' rings in NBR for a Spirax Sarco BVA320S/14 pneumatic actuator.

## Valve

## DN25 to DN50 (1" - 2") Spare parts

The spare parts available are shown in solid outline. Parts drawn in a grey line are not supplied as spares.

#### Available spares


Seats, insert 'O' ring and stem seals 5, 6, 9, 10

Insert tool - Required to aid the removal of the ball valve insert (2)

Not shown

Please note: Spare parts are common for both the ABV21i and ABV40i.

Caution - The ball must be installed with the vent hole on the upstream side of the valve.

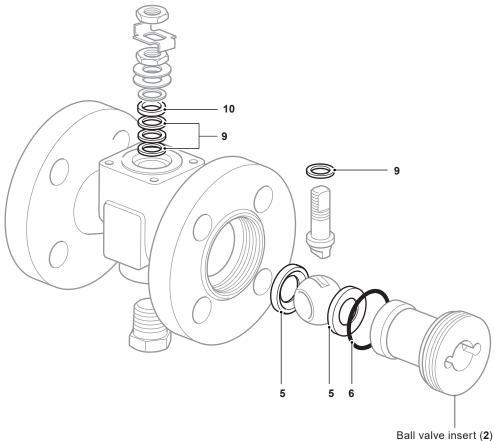

(not an available spare). Please note: You will need to order the Insert tool listed in the table above to aid removal.

## How to order spares

Always order spares by using the description given in the column headed 'Available spares' and state the size and type of ball valve. **Example:** 1 set of seats, insert 'O' ring and stem seals for a Spirax Sarco DN50 ABV21i boiler blowdown valve.

## DN65 (21/2") Spare parts

The spare parts available are shown in solid outline. Parts drawn in a grey line are not supplied as spares.

#### Available spares

Seats, insert 'O' ring, seat 'O' ring, stem 'O' ring, lower stem seals and upper stem packing


5, 6, 7, 8, 11, 12

Insert tool - Required to aid the removal of the ball valve insert (2)

Not shown

Please note: Spare parts are common for both the ABV21i and ABV40i.

Caution - The ball must be installed with the vent hole on the upstream side of the valve.

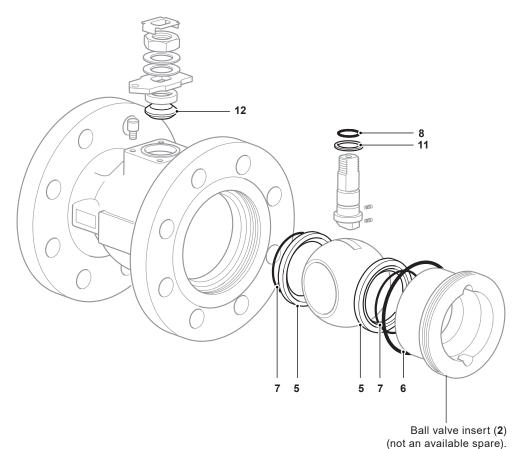

Please note: You will need to order the Insert tool listed in the table above to aid removal.

## How to order spares

Always order spares by using the description given in the column headed 'Available spares' and state the size and type of ball valve. **Example:** 1 set of seats, insert 'O' ring, seat 'O' ring, stem 'O' ring, lower stem seals and upper stem packing for a Spirax Sarco DN50 ABV40i boiler blowdown valve.