

# Pressure Surplussing Valve with Cast Steel Body


# Description

The SDP143 is a cast steel pilot operated pressure surplussing valve suitable for steam, air and industrial gasses (**Note: It is not suitable for oxygen service**). The SDP143 controls by sensing the upstream pressure through a pressure sensing pipe taken from the union **29** which is clearly identified on page 2.

# Sizes and pipe connections

DN15LC - Low Capacity version, DN15, DN20, DN25, DN32, DN40, DN50 and DN80. Flanged to EN 1092 PN40, BS 10 Table 'J', ANSI 300 and ANSI 150.

# Pressure / temperature limits

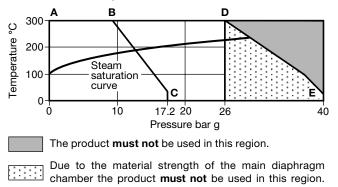

A-D-E Flanged EN 1092 PN40, ANSI 300 and BS 10 Table J.

- A-B-C Flanged ANSI 150.
- Note: Two colour coded pressure adjustment springs are available for the following downstream pressure ranges: Red 0.2 bar g to 17 bar g Grey 16.0 bar g to 24 bar g


	0	
Body design conditions		PN40
Maximum design pressure	A-B-C	17.2 bar g @ 40°C
Maximum design pressure	A-D-E	Limited to 26 bar g
Maximum design temperature		300°C @ 26 bar g
Minimum design temperature		0°C
Maximum upstream pressure	A-D-E	26 bar g
for saturated steam service	A-B-C	14 bar g
Maximum operating temperature		300°C @ 26 bar g
Minimum operating temperature		0°C
Note: For lower operating temperating	eratures	consult Spirax Sarco
Maximum differential pressure	A-D-E	26 bar
Maximum ameronital pressure	A-B-C	14 bar
Designed for a maximum cold hvo	Iraulic te	st pressure of 60 bar o

Designed for a maximum cold hydraulic test pressure of 60 bar g Note: With internals fitted, test pressure must not exceed 40 bar g

# K<sub>v</sub> values


The  $K_v$  maximum values shown below are **full** capacities and should be used for safety valve sizing purposes only.

DN15LC	<b>DN15</b>	DN20	DN25	DN32	DN40	<b>DN50</b>	DN80
1.0	2.8	5.5	8.1	12.0	17.0	28.0	64.0
For conve	ersion:	$C_{V}(UK) = K_{V} \times 0.963$			C <sub>v</sub> (U	S) = K <sub>V</sub> :	x 1.156

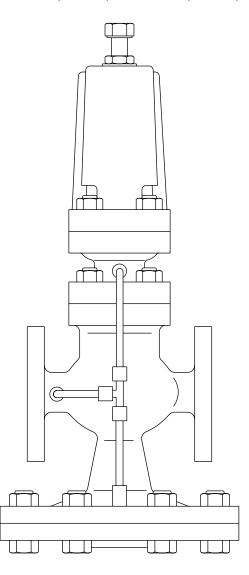


Local regulations may restrict the use of this product to below the conditions quoted.

In the interests of development and improvement of the product, we reserve the right to change the specification without notice.

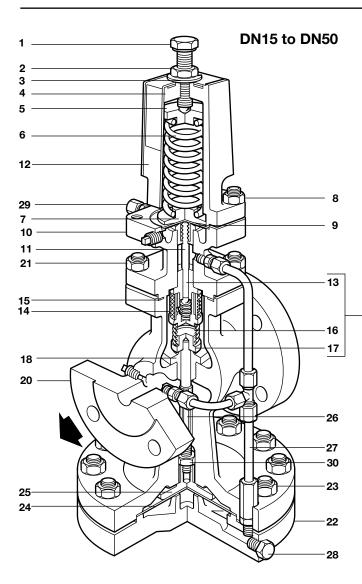


# Materials

IVIO	11011015			
No.	Part		Material	
1	Adjustmer	nt screw	Steel	BS 3692 Gr. 8.8
2	Adjustmer	t lock-nut	Steel	BS 3692 Gr. 8
3	'C' washer	r	Stainless steel	BS 1449 304 S16
4	Spring hou	using	Cast steel	DIN 17245 GS C25
5	Top spring	j plate	Steel	BS 970 220 Mo7
6	Pressure adjustment spring		Stainless steel	BS 2056302 S25
7	Bottom sp	ring plate	Steel	BS 970 220 Mo7
8			Steel	BS 3692 Gr. 8
U	housing Securing studs	Steel	BS 4439 Gr. 8.8	
			DN15 to DN80	M10 x 30 mm
9	Pilot diaph	iragm	Stainless steel	BS 1449 316 S31
10	Pilot valve housing		Steel	DIN 17245 GS C25 GP 240 GH + N
11	Pilot valve	plunger	Stainless steel	BS 970 431 S29
12	Spring hou	using cover	Stainless steel	BS 1449 304 S12
13	Pilot valve	and seat unit	Stainless steel	BS 970 431 S29
14	Internal strainer		Stainless steel	BS 1449 304 S16
15	Body gask	et	Stainless steel exfoliated grap	
16	Main valve	e return spring	Stainless steel	BS 2056 302 S25
17	Main valve	;	Stainless steel	BS 970 431 S29
18	Main valve	e seat	Stainless steel	BS 970 431 S29

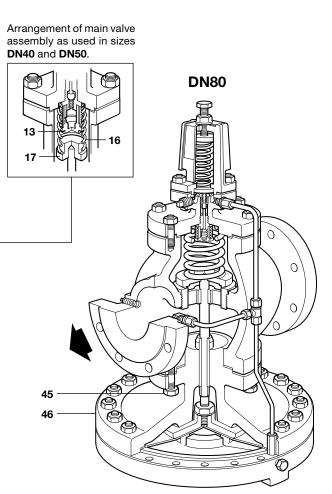


No.	Part		Material	
20	Main valve	body	Cast steel	DIN 17245 GS C25
21	Pilot valve	Securing nuts	Steel	BS 3692 Gr. 8
21	housing	Securing studs	Steel	BS 4439 Gr. 8.8
			DN15 and DN2	0 M10 x 25 mm
			DN25 to DN5	
			DN80	M12 x 40 mm
22	Main diaph	ragm chamber	Cast steel	DIN 17245 GS C25
23	Main	Securing nuts	Steel	BS 3692 Gr.8
20	diaphragm	Securing bolts	Steel	BS 4882 Gr. 2H
			DN15 and DN2	0 M12 x 50 mm
			DN25 and DN3	2 M12 x 60 mm
			DN40 and DN5	
			DN80	M12 x 80 mm
24	Main diaph	ragms	Stainless steel	BS 1449 316 S31
25	Main diaph	ragm plate	Stainless steel	BS 970 431 S29
26	Pushrod		Stainless steel	BS 970 431 S29
27	Control pip	e assembly	Stainless steel	BS 3605 304 S14
28	Plug 1/8"BS	Р	Steel	
29	Pressure p	ipe union	Steel	
30	Lock-nut		Steel	BS 3692 Gr. 8
45	Body stude	3	Steel	BS 4439 Gr. 8.8
	Body nuts	M12 x 40 mm	Steel	BS 3692 Gr. 2H
46	Upper mair diaphragm		Cast steel	DIN 17245 GS C25

# Dimensions / weights (approximate) in mm and kg

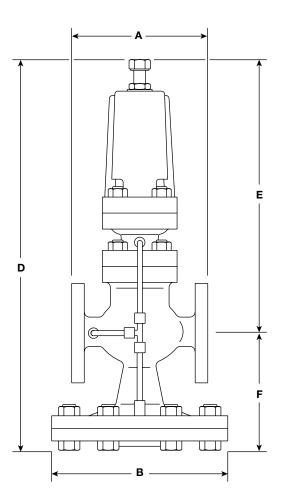

<b>A</b> 130	<b>A</b> 130	Α	Α	В	D	-	-	
130	130			-	U U	E	F	Weight
	100	122	130	175	405	277	128	15
130	130	122	130	175	405	277	128	15
150	150	142	150	175	405	277	128	16
160	160	156	164	216	440	288	152	23
180	183	176	184	216	440	288	152	25
200	209	200	209	280	490	305	185	40
230	236	230	243	280	490	305	185	42
310	319	310	325	350	580	322	258	103
	150 160 180 200 230	150 150   160 160   180 183   200 209   230 236	150 150 142   160 160 156   180 183 176   200 209 200   230 236 230	150150142150160160156164180183176184200209200209230236230243	150150142150175160160156164216180183176184216200209200209280230236230243280	150150142150175405160160156164216440180183176184216440200209200209280490230236230243280490	150150142150175405277160160156164216440288180183176184216440288200209200209280490305230236230243280490305	150150142150175405277128160160156164216440288152180183176184216440288152200209200209280490305185230236230243280490305185

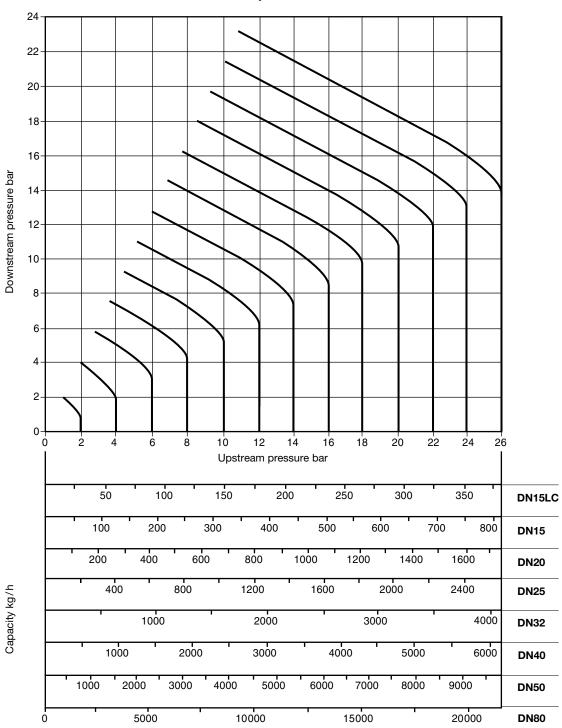

Steam capacities chart

# How to use the chart


#### Saturated steam

A valve is required to pass 600 kg/h reducing from 6 bar to 4 bar. Find the point at which the curved 6 bar upstream pressure line crosses the horizontal 4 bar downstream pressure line. A perpendicular dropped from this point gives the capacities of all DP sizes under these conditions. A DN32 valve, is the smallest size which will carry the required load.

#### Superheated steam

Because of the higher specific volume of superheated steam a correction factor must be applied to the figure obtained from the chart above. For 55°C of superheat the factor is 0.95 and for 100°C of superheat the factor is 0.9.

Using the example given for saturated steam, the DN32 valve would pass 740 x 0.95 = 703 kg/h if the steam had 55°C of superheat. It is still big enough to pass the required load of 600 kg/h.

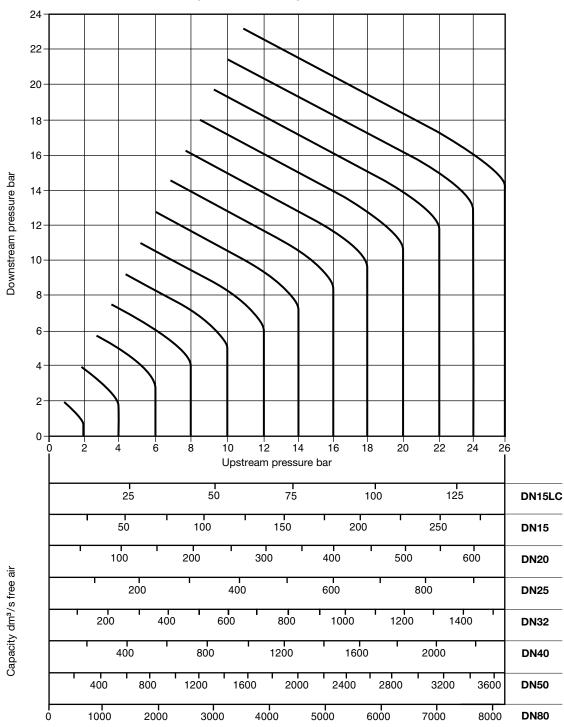

# **Compressed air capacities chart**

# How to use the chart

Capacities are given in cubic decimetres of free air per second (dm<sup>3</sup>/s). The use of the capacity chart can be best explained by an example. Required, a valve to pass 100 dm<sup>3</sup>/s of free air reducing from 12 bar to 8 bar.

Find the point at which the curved 12 bar upstream pressure line crosses the horizontal 8 bar downstream pressure line. A perpendicular dropped from this point shows that whereas a DN15LC valve will only pass 57 dm<sup>3</sup>/s and is therefore not large enough, a DN15 valve will pass approximately 120 dm<sup>3</sup>/s under these conditions and is the correct valve size to choose.

#### Safety information, installation and maintenance

For full details see the Installation and Maintenance Instructions (IM-P004-05) supplied with the product.

# Installation note:

The valve should be installed in a horizontal pipeline with the direction of flow as indicated by the arrow on the valve body.

# How to order

**Example:** 1 off Spirax Sarco DN32 SDP143 pilot operated pressure surplussing valve fitted with a red pressure adjustment spring and having flanged EN 1092 PN40 connections.

spirax sarco

# Spare parts

Available s	pares
-------------	-------

Maintenance kit A stand-by set of spares for general maintenance purposes	s and covers all spares marked*			
Main diaphragm	(2 off)		A	
Pilot diaphragm	(2 off)		E	
Pilot valve seal assembly			C	
Pilot valve and plunger assembly			D, E	
Main valve assembly			F, H	
Main valve return spring			G	
	Red	0.2 to 1	17 bar	
Pressure adjustment spring	Grey	16 to		
Control pipe assembly			к	
Body gasket	(packet of 3)		0	
Set of spring housing securing studs and nuts	(set of 4)		P	
Set of pilot valve housing securing studs and nuts	(set of 4)		Q	
	(set of 10)	DN15 and DN20		
Set of diaphragm chamber securing bolts and nuts	(set of 12)	DN25 and DN32	R	
	(set of 16)	DN40 and DN50		
	(set of 20)	DN80		
Set of main body studs and nuts (DN80)	(set of 6)		Т	
Pushrod and main diaphragm plate assembly			V, W, X	

#### How to order spares

Always order spares by using the description given in the column headed 'Available spares' and state the size and type of pressure reducing valve.

Example: 1 - Main valve assembly for a Spirax Sarco DN15 SDP143 pilot operated pressure surplussing valve.

How to fit. See Installation and Maintenance Instructions supplied with the pressure reducing valve. Further copies are available on request.


# Interchangeability of spares

The following table shows how in certain sizes some parts are interchangeable. For example in the line headed 'Main diaphragm' the diaphragm used in the following sizes: DN15LC, DN15 and DN20 is common to these sizes by the letter 'a'. The letter 'b' indicates that sizes DN25 and DN32 use one common diaphragm.

Some parts, particularly pilot and main valve assemblies are specific to particular models e.g 'SDP' 'G'. Interchangeability is therefore restricted to model type for some parts.

**† Please note for storage purposes:** The spare parts marked **†** are not of the same material as those for the DP143 and DP163, consequently, they are not compatible for interchangeability.

Size	DN15LC	DN15	DN20	DN25	DN32	DN40	DN50	DN80
Main diaphragm	а	а	а	b	b	С	с	d
Pilot diaphragm	а	а	а	а	а	а	а	а
Pilot valve seal assembly	а	а	а	а	а	а	а	а
Pilot valve and plunger assembly	а	а	а	а	а	а	а	а
Main valve assembly	а	b	с	d	е	f	g	h
Main valve return spring	а	а	а	b	b	С	с	d
Pressure adjustment spring	а	а	а	а	а	а	а	а
Control pipe assembly	а	а	b	с	d	е	f	g
Body gasket	а	а	а	b	b	С	с	d
Set of spring housing securing studs and nuts	а	а	а	а	а	а	а	а
Set of pilot valve housing securing studs and nuts	а	а	а	b	b	с	с	d
Set of diaphragm chamber securing bolts and nuts	а	а	а	b	b	С	с	d
Set of main body studs and nuts	_	_	-	_	_	_	_	а

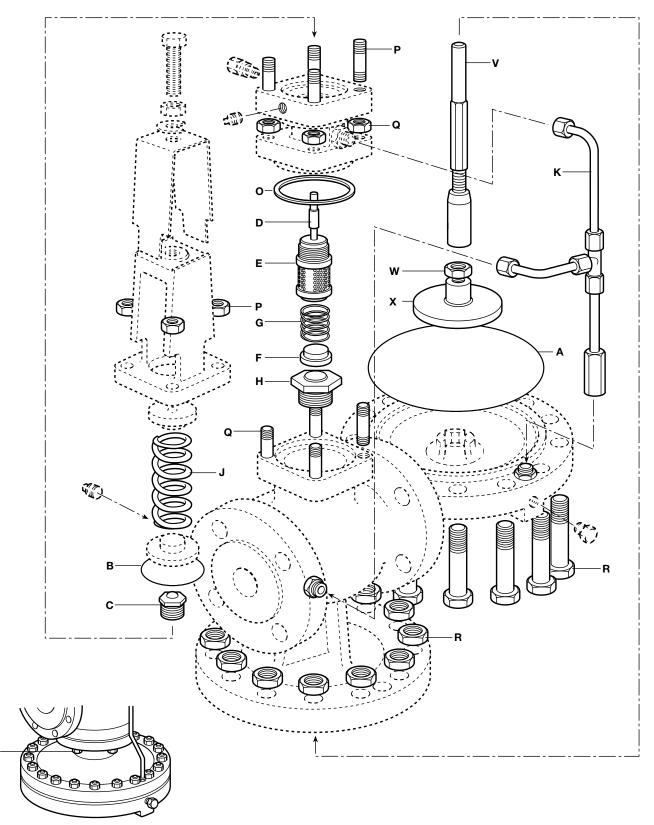

Arrangement of main diaphragm chamber DN80 size only.

Т