
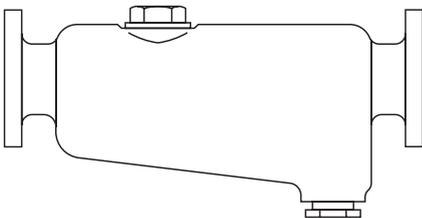


# S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

## Installation and Maintenance Instructions

---

---

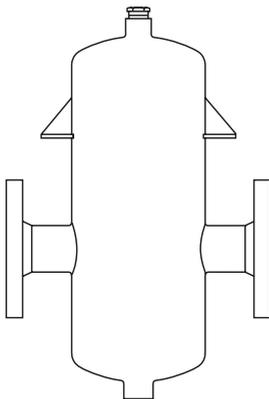

1. Safety information
2. General product information
3. Installation
4. Commissioning
5. Operation
6. Maintenance
7. Spare parts



# 1. Safety information

Safe operation of these products can only be guaranteed if they are properly installed, commissioned, used and maintained by qualified personnel (see Section 1.11) in compliance with the operating instructions. General installation and safety instructions for pipeline and plant construction, as well as the proper use of tools and safety equipment must also be complied with.

## Warning

The inspection plug gasket on the S2, S3, S12 and S13 and the bottom cover gasket on the S5 and S6 contain a thin stainless steel support ring which may cause physical injury if not handled and disposed of carefully.

## 1.1 Intended use

Referring to the Installation and Maintenance Instructions, name-plate and Technical Information Sheet, check that the product is suitable for the intended use/application.

The products listed below comply with the requirements of the EU Pressure Equipment Directive/ UK Pressure Equipment (Safety) Regulations and carry the  /  mark when so required.

The products fall within the following Pressure Equipment Directive categories:

Product		Group 1 Gases	Group 2 Gases	Group 1 Liquids	Group 2 Liquids
<b>S1</b>	16 bar g	DN15 - DN20	SEP	SEP	SEP
		DN25	2	1	SEP
<b>S2</b>	16 bar g	DN32 - DN40	1	SEP	SEP
		DN50	2	1	SEP
<b>S3</b>	16 bar g	DN40	1	SEP	SEP
		DN50 - DN80	2	1	SEP
		DN100 - DN150	3	2	2
		DN200	2	1	2
<b>S5 and S6</b>	50 bar g	DN15	SEP	SEP	SEP
		DN20 - DN25	2	1	SEP
		DN32 - DN50	3	2	2

Product		Group 1 Gases	Group 2 Gases	Group 1 Liquids	Group 2 Liquids		
<b>S7 and S8</b>	14 bar g	DN65 - DN125	3	2	2	SEP	
		DN150 - DN200	4	3	2	SEP	
		DN250 - DN350	4	4	2	SEP	
	20 bar g and 23 bar g	DN65 - DN80	3	2	2	SEP	
		DN100 - DN150	4	3	2	SEP	
		DN200 - DN300	4	4	2	SEP	
	25 bar g	DN350	4	4	2	1	
		DN65 - DN80	3	2	2	SEP	
		DN100 - DN150	4	3	2	SEP	
		DN200 - DN250	4	4	2	SEP	
	<b>S12</b>	25 bar g	DN300 - DN350	4	4	2	1
			DN32 - DN40	1	SEP	SEP	SEP
DN50			2	1	SEP	SEP	
DN40			1	SEP	SEP	SEP	
<b>S13</b>	25 bar g	DN50 - DN80	2	1	SEP	SEP	
		DN100 - DN125	3	2	2	SEP	
		DN150 - DN200	3	2	2	SEP	
		DN100 - DN125	3	2	2	SEP	

- i) The product has been specifically designed for use on steam and compressed air which are in Group 2 of the above mentioned Pressure Equipment Directive.
- ii) Check material suitability, pressure and temperature and their maximum and minimum values. If the maximum operating limits of the product are lower than those of the system in which it is being fitted, or if malfunction of the product could result in a dangerous overpressure or overtemperature occurrence, ensure a safety device is included in the system to prevent such over-limit situations.
- iii) A number of products are supplied for the intention of the end user (or agent thereof) modifying the flange configuration from that supplied. It is the responsibility of the organisation carrying out the modification to do so in accordance with the internationally recognised flange standards and to ensure that the design rating and operation of the product are not compromised. Spirax Sarco will not be held responsible for any unapproved modification or consequential liability resulting in failure to observe these requirements.
- iv) Determine the correct installation situation and direction of fluid flow.
- v) Spirax Sarco products are not intended to withstand external stresses that may be induced by any system to which they are fitted. It is the responsibility of the installer to consider these stresses and take adequate precautions to minimise them.
- vi) Remove protection covers from all connections and protective film from all name-plates, where appropriate, before installation on steam or other high temperature applications.
- vii) Prior to use, the user shall ensure the fluid compatibility with the equipment material.

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

## 1.2 Access

Ensure safe access and if necessary a safe working platform (suitably guarded) before attempting to work on the product. Arrange suitable lifting gear if required.

## 1.3 Lighting

Ensure adequate lighting, particularly where detailed or intricate work is required.

## 1.4 Hazardous liquids or gases in the pipeline

Consider what is in the pipeline or what may have been in the pipeline at some previous time. Consider: flammable materials, substances hazardous to health, extremes of temperature.

## 1.5 Hazardous environment around the product

Consider: explosion risk areas, lack of oxygen (e.g. tanks, pits), dangerous gases, extremes of temperature, hot surfaces, fire hazard (e.g. during welding), excessive noise, moving machinery.

## 1.6 The system

Consider the effect on the complete system of the work proposed. Will any proposed action (e.g. closing isolation valves, electrical isolation) put any other part of the system or any personnel at risk?

Dangers might include isolation of vents or protective devices or the rendering ineffective of controls or alarms. Ensure isolation valves are turned on and off in a gradual way to avoid system shocks.

## 1.7 Pressure systems

Ensure that any pressure is isolated and safely vented to atmospheric pressure. Consider double isolation (double block and bleed) and the locking or labelling of closed valves. Do not assume that the system has depressurised even when the pressure gauge indicates zero.

## 1.8 Temperature

Allow time for temperature to normalise after isolation to avoid danger of burns.

## 1.9 Tools and consumables

Before starting work ensure that you have suitable tools and/or consumables available. Use only genuine Spirax Sarco replacement parts.

## 1.10 Protective clothing

Consider whether you and/or others in the vicinity require any protective clothing to protect against the hazards of, for example, chemicals, high/low temperature, radiation, noise, falling objects, and dangers to eyes and face.

## 1.11 Permits to work

All work must be carried out or be supervised by a suitably competent person.

Installation and operating personnel should be trained in the correct use of the product according to the Installation and Maintenance Instructions.

Where a formal 'permit to work' system is in force it must be complied with. Where there is no such system, it is recommended that a responsible person should know what work is going on and, where necessary, arrange to have an assistant whose primary responsibility is safety. Post 'warning notices' if necessary.

## 1.12 Handling

Manual handling of large and/or heavy products may present a risk of injury. Lifting, pushing, pulling, carrying or supporting a load by bodily force can cause injury particularly to the back. You are advised to assess the risks taking into account the task, the individual, the load and the working environment and use the appropriate handling method depending on the circumstances of the work being done.

## 1.13 Residual hazards

In normal use the external surface of the product may be very hot. If used at the maximum permitted operating conditions the surface temperature of some products may reach temperatures of 300 °C (572 °F).

Many products are not self-draining. Take due care when dismantling or removing the product from an installation (refer to Section 6 'Maintenance instructions').

## 1.14 Freezing

Provision must be made to protect products which are not self-draining against frost damage in environments where they may be exposed to temperatures below freezing point.

## 1.15 Disposal

Unless otherwise stated in the Installation and Maintenance Instructions, this product is recyclable and no ecological hazard is anticipated with its disposal providing due care is taken.


## 1.16 Returning products

Customers and stockists are reminded that under EC Health, Safety and Environment Law, when returning products to Spirax Sarco they must provide information on any hazards and the precautions to be taken due to contamination residues or mechanical damage which may present a health, safety or environmental risk. This information must be provided in writing including Health and Safety data sheets relating to any substances identified as hazardous or potentially hazardous.

## 1.17 Working safely with cast iron products on steam

Cast iron products are commonly found on steam and condensate systems. If installed correctly using good steam engineering practices, it is perfectly safe.

However, because of its mechanical properties, it is less forgiving compared to other materials such as SG iron or carbon steel. The following are the good engineering practices required to prevent waterhammer and ensure safe working conditions on a steam system.

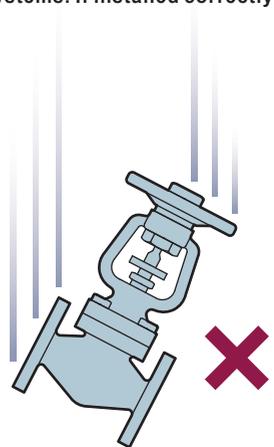


## Safe Handling


Cast Iron is a brittle material. If the product is dropped during installation and there is any risk of damage the product should not be used unless it is fully inspected and pressure tested by the manufacturer.

# Prevention of waterhammer

Steam trapping on steam mains:

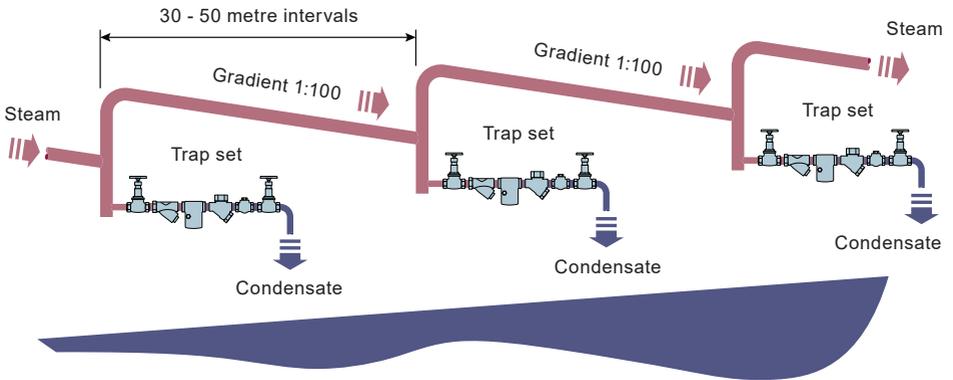


## Steam Mains - Do's and Don'ts:

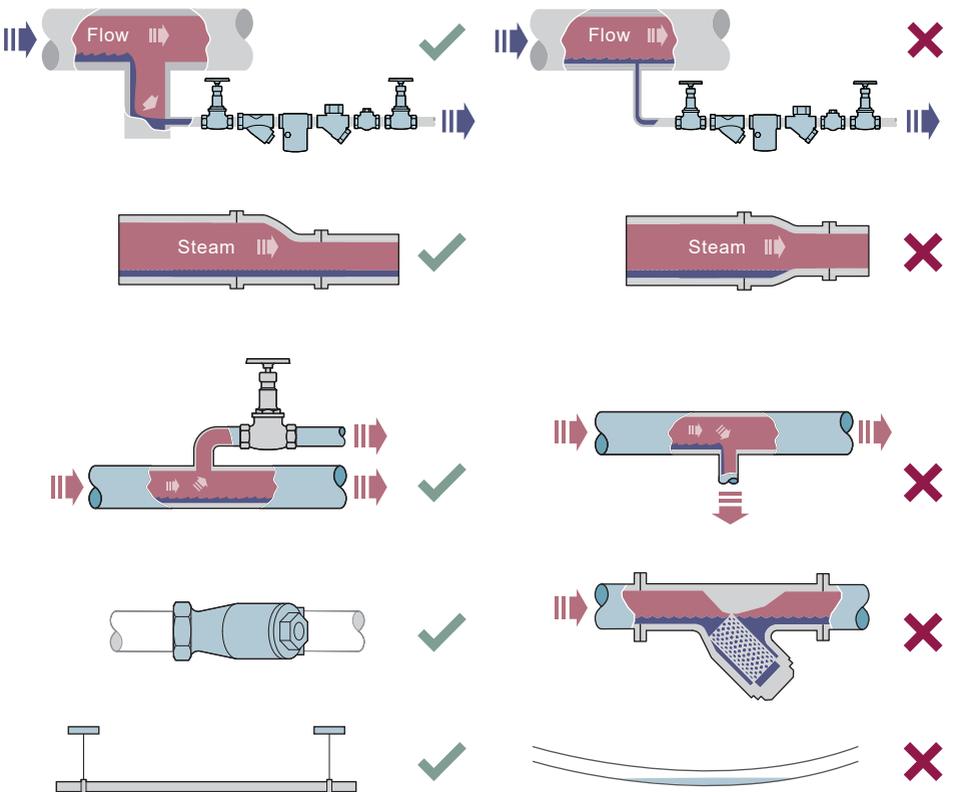

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

# Prevention of tensile stressing


Pipe misalignment:

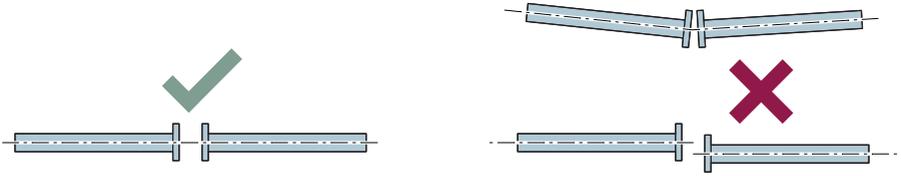

Installing products or re-assembling after maintenance:




Do not over tighten.  
Use correct torque figures.

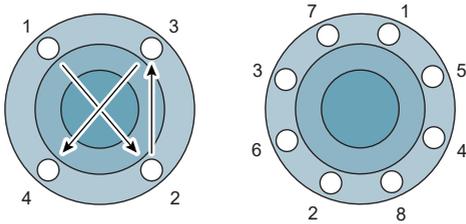

Flange bolts should be gradually tightened across diameters to ensure even load and alignment.

Prevention of tensile stressing continued on next page

**Thermal expansion:**

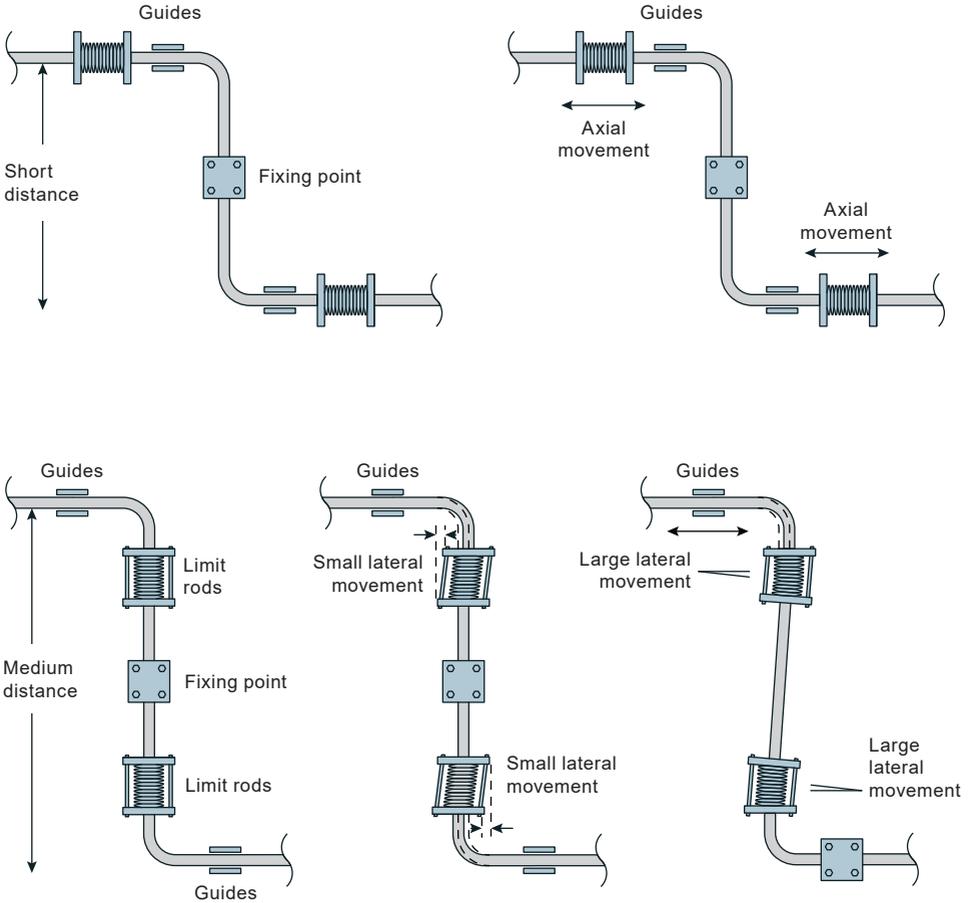

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

## 2. General product information

### 2.1 General description

The products detailed are all baffle type separators used for the removal of entrained liquids in steam, compressed air and gas systems. We recommend the fitting of insulating jackets to improve the performance of the separator.

**Note:** For additional product data see the following Technical Information Sheets.

Type	Material	Pressure rating	Sizes	Connections	TI reference
S1	SG iron	PN16	½", ¾" and 1"	Screwed	TI-P023-02
S2	Cast iron	PN16	1¼", 1½" and 2"	Screwed	TI-P023-07
S3	Cast iron	PN16	DN40 - DN200	Flanged	TI-P023-24
S5	Carbon steel	PN50/ASME 300	DN15 - DN50	Screwed and flanged	TI-P023-11
S6	Austenitic stainless steel 316L	PN50/ASME 300	DN15 - DN50	Screwed and flanged	TI-P023-12
S7*	Carbon steel	PN16 and PN40	DN65 - DN350	Flanged	TI-P138-03
S8*	Austenitic stainless	PN16 and PN40	DN65 - DN350	Flanged	TI-P138-10
S12	SG iron	PN25	1¼", 1½" and 2"	Screwed	TI-P023-25
S13	SG iron	PN25	DN40 - DN200	Flanged	TI-P023-26

\* **Note:** The S7 and S8 separators are designed and manufactured in accordance with EN 13445:2002 – 'Unfired Pressure Vessels'.

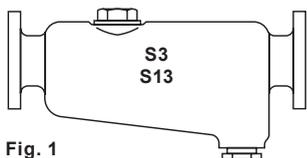


Fig. 1




Fig. 2

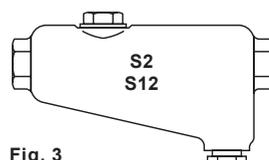


Fig. 3

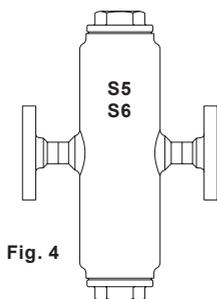


Fig. 4

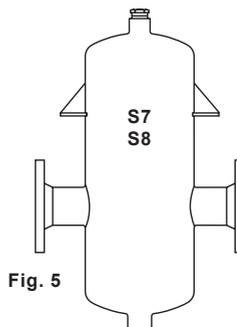


Fig. 5

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

# 3. Installation

**Note:** Before actioning any installation observe the 'Safety Information' in Section 1.

Referring to the Installation and Maintenance Instructions, body markings, name-plate (if fitted) and Technical Information Sheet, check that the product is suitable for the intended installation.

- 3.1** Check materials, pressure and temperature and their maximum values. If the maximum operating limit of the product is lower than that of the system in which it is being fitted, ensure a safety device is included in the system to prevent overpressurisation.
- 3.2** Determine the correct installation situation and the direction of fluid flow.
- 3.3** Remove protective covers from all connections and the protective film from all name-plates, where appropriate, before installation on steam or other high temperature applications.
- 3.4** The separators may be lagged if required.

## Important installation note

for the S1, S2, S3, S12 and S13 separators:

Install in a horizontal pipeline with the drain directly below. To ensure that any separated liquid is drained away quickly, a suitable liquid drainer or steam trap must be connected to the drain.

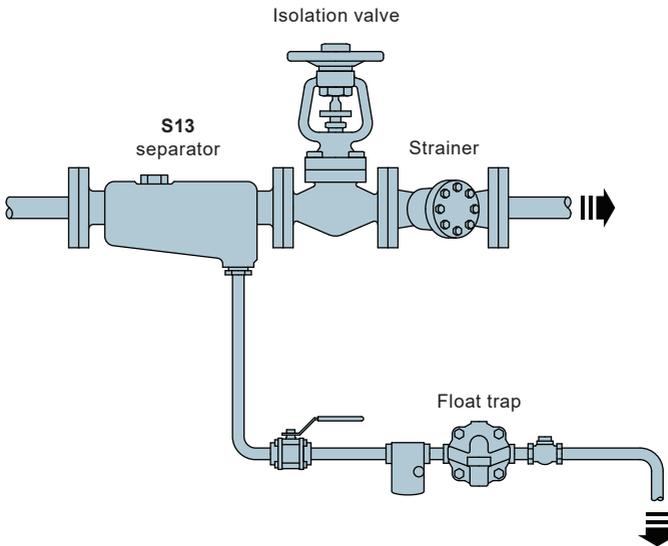


Fig. 6 Separator on a steam line

### 3.5 Installation for the S5 and S6

Install in a horizontal pipeline with the drain directly below.

To ensure that any separated liquid is drained quickly, a suitable liquid drainer or steam trap must be connected to the drain connection. A float type trap is recommended.

For those steam systems where air can be present, air can collect in the upper portion of the separator. In this situation a suitable air vent should be connected to the air vent connection.

If an air vent is not being fitted then the connection must have the plastic transit protection plug removed and must have a carbon steel class 3000 lb plug fitted.

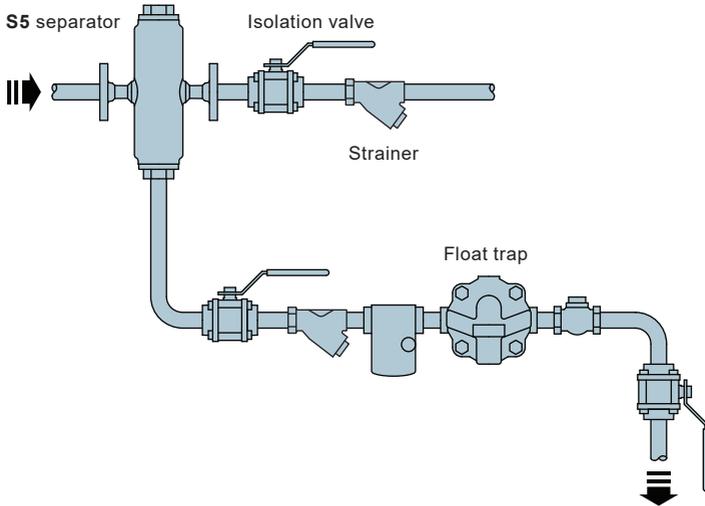


Fig. 7

### 3.6 Installation for the S7 and S8

Install in a horizontal pipeline with the drain directly below. All sizes are fitted with support brackets which can be used to minimise piping loads. Each bracket has two drilled holes. To ensure that any separated liquid is drained quickly, a suitable liquid drainer or steam trap must always be connected to the drain connection. A float type trap is recommended.

For those steam systems where air can be present, air can collect in the upper portion of the separator. In this situation a suitable air vent should be connected to the air vent connection.

If an air vent is not being fitted then the connection must have the plastic transit protection plug removed and a carbon steel class 3000 lb plug fitted.

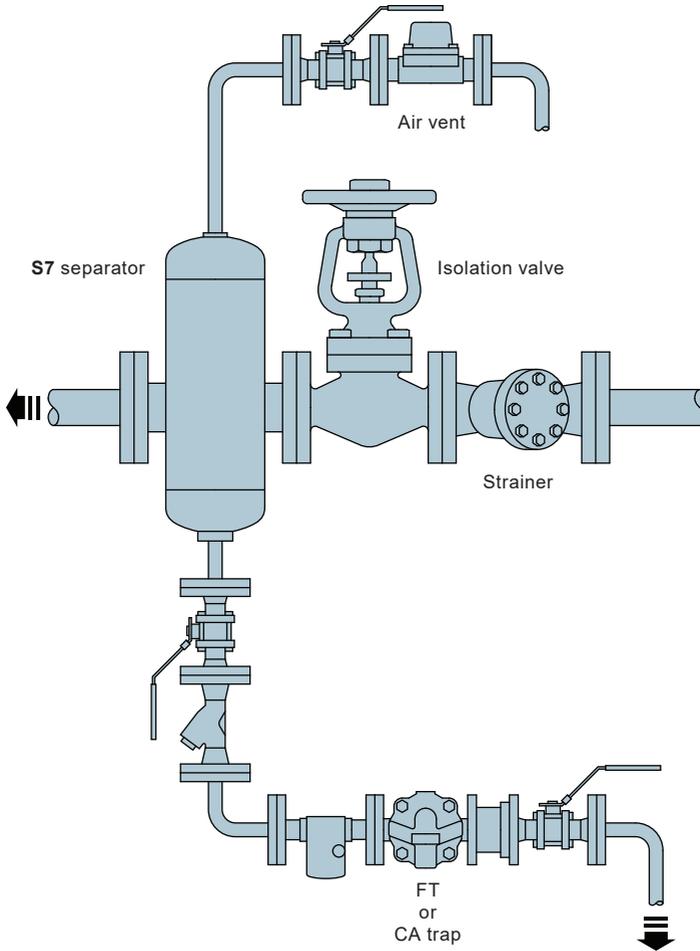


Fig. 8 Separator on a steam line

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

## 4. Commissioning

After installation or maintenance, ensure that the system is fully functioning. Carry out tests on any alarms or protective devices.

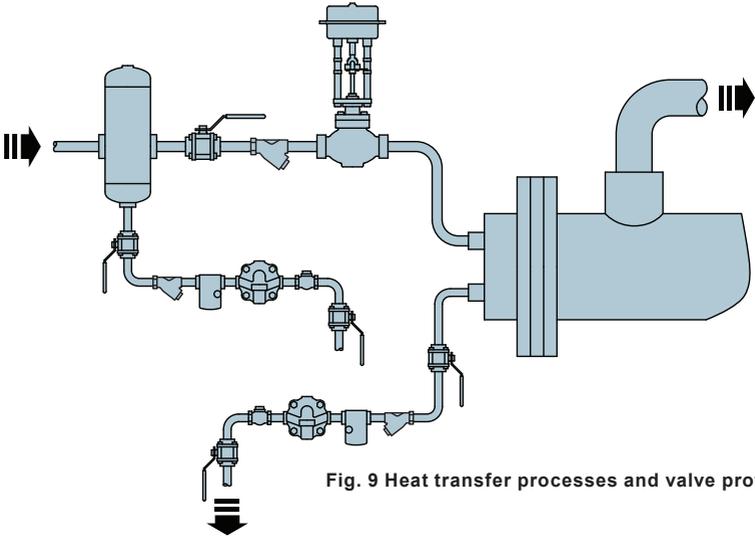


Fig. 9 Heat transfer processes and valve protection

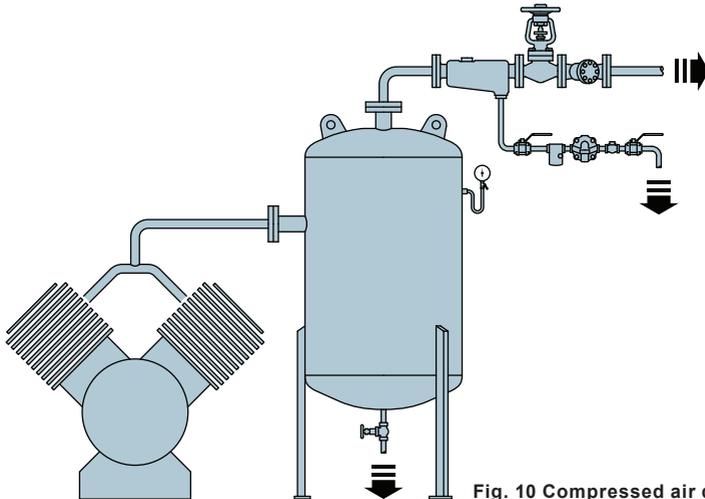


Fig. 10 Compressed air distribution

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

# 5. Operation

Separators are designed to gather together small droplets of entrained liquids and then separate them from the gas/vapour flow. The relatively heavy droplets impinge on the internal baffles and are then directed to the separator drain connection and removed from the system using a steam trap, or when used on air or gas distribution system, a liquid drainer.

# 6. Maintenance

**Note:** Before actioning any maintenance programme observe the 'Safety information' in Section 1.

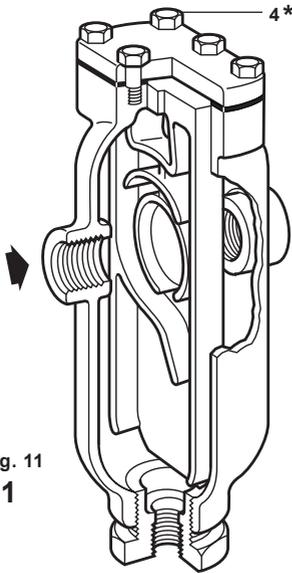



Fig. 11  
S1

**Warning**  
There are no internal components that require maintenance.

**Table 1 Recommended tightening torques**

Separator	Item	Size		or mm		N m	(lbf ft)
S1	4	1/2"	7/16"		1/4" UNF x 3/4"	12 - 14	(9 - 10)
		3/4"	1/2"		5/16" UNF x 3/4"	28 - 32	(21 - 24)
		1"	9/16"		3/8" UNF x 3/4"	40 - 50	(30 - 37)

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

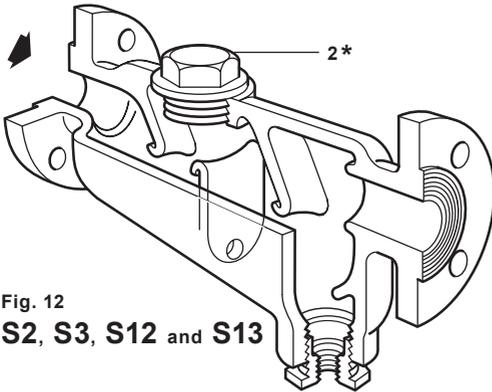

**Warning**  
There are no internal components that require maintenance.

Fig. 12  
**S2, S3, S12 and S13**

**Table 2 Recommended tightening torques**

Separator	Item	Size		or mm		N m	(lbf ft)
<b>S2</b>	2	2"	60 A/F		M72	190 - 210	(140 - 155)
<b>S3</b>	2	DN40	46 A/F		M56	150 - 165	(110 - 121)
		DN50	60 A/F		M72	190 - 210	(140 - 155)
		DN65	46 A/F		M56	150 - 165	(110 - 121)
		DN80	60 A/F		M72	190 - 210	(140 - 155)
		DN100	60 A/F		M72	190 - 210	(140 - 155)
		DN125	60 A/F		M72	190 - 210	(140 - 155)
		DN150	60 A/F		M72	190 - 210	(140 - 155)
<b>S12</b>	2	2"	46 A/F		M56	150 - 165	(110 - 121)
		<b>S13</b>	2	DN40	46 A/F		M56
DN50	46 A/F				M56	150 - 165	(110 - 121)
DN65	46 A/F				M56	150 - 165	(110 - 121)
DN80	60 A/F				M72	190 - 210	(140 - 155)
DN100	60 A/F				M72	190 - 210	(140 - 155)
DN125	60 A/F				M72	190 - 210	(140 - 155)
DN150	60 A/F				M72	190 - 210	(140 - 155)
DN200	60 A/F		M72	190 - 210	(140 - 155)		

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

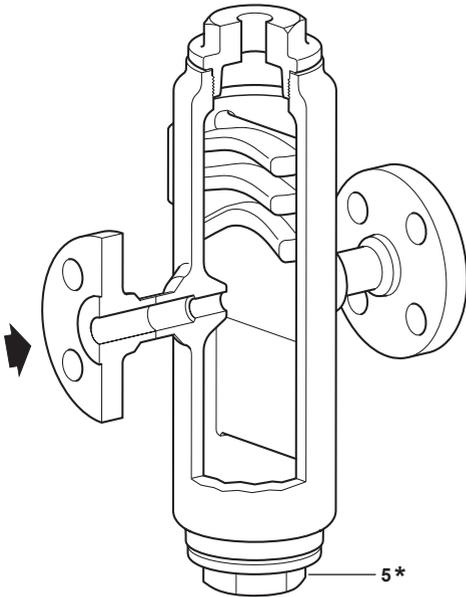


Fig. 13  
**S5 and S6**

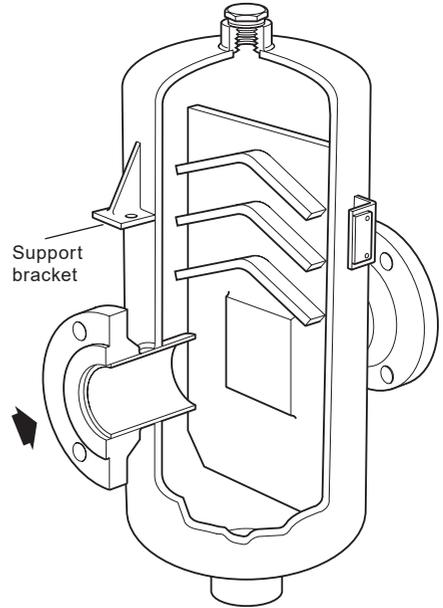


Fig. 14  
**S7 and S8**

**Table 3 Recommended tightening torques**

Separator	Item	Size		N m	(lbf ft)
<b>S5</b>	5	DN15- DN50	46 A/F	300	(222)
<b>S6</b>					

## 7. Spare parts

There are no spare parts required or available for these components.

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators



---

S1, S2, S3, S5, S6, S7, S8, S12 and S13 Separators

