



Spirax EasiHeat™

HTG Steam Side Control Water Heating Compact Heat Transfer Solution

Installation and Maintenance Instructions

IM-P481-10-US

September 2017



1. Safety information
2. General product information
3. Installation
4. Commissioning
5. Operation
6. Maintenance

Copyright © Spirax-Sarco Limited 2017

All rights reserved

Spirax-Sarco Limited grants the legal user of this product (or device) the right to use the Work(s) solely within the scope of the legitimate operation of the product (or device). No other right is granted under this licence. In particular and without prejudice to the generality of the foregoing, the Work(s) may not be used, sold, licensed, transferred, copied or reproduced in whole or in part or in any manner or form other than as expressly granted here without the prior written consent of Spirax-Sarco Limited.

1. Safety information

In addition to putting your personnel at risk of death or serious harm, failure to comply with the instructions, recommendations and guidance set out in this document may jeopardise your warranty rights. Further, use of the product(s) otherwise than in accordance with this document will be undertaken entirely at your own risk. To the fullest extent legally permitted, Spirax Sarco excludes all responsibility and liability for any and all loss or damage caused in the event that the practices and procedures detailed in this document have not been followed.

Safe operation of this product can only be guaranteed if it is properly installed, commissioned, used and maintained by qualified personnel (see Section 1.11) in compliance with the operating instructions. General installation and safety instructions for pipeline and plant construction, as well as the proper use of tools and safety equipment must also be complied with.

Note: This document refers only to the mechanical installation and commissioning of the Spirax EasiHeat™ packaged heat exchange system and should be used in conjunction with the relevant IMIs for the other system components and supplementary safety information for all the system components.

Warning - Lifting

The Spirax EasiHeat unit should be lifted by a suitable forklift truck, from the base, placed in position and securely bolted to the floor.

On no account is the Spirax EasiHeat™ unit to be lifted by any other part, other than the base.

Note: Sufficient space should be provided around the systems location to allow access for maintenance.

Warnings - General:

1. This product is designed and constructed to withstand the forces encountered during normal use.
2. Use of the product for any purpose other than its intended use could cause damage to the product and may cause injury or fatality to personnel.
3. Before any installation or maintenance procedure, always ensure that all primary steam and condensate return lines and secondary water lines are isolated.
4. Ensure any residual internal pressure in the system or connecting pipework is carefully relieved.
5. Allow hot parts to cool before commencing work, to avoid the risk of burns.
6. Always wear appropriate safety clothing before carrying out any installation or maintenance work.

Warning - Anti-legionella cycle:

The temperature set-point during the anti-legionella cycle will exceed normal operating temperatures and could cause scalding if water is used during the cycle.

The cycle should only be initiated when it is safe to do so.

There must also be water drained from the circuit at the end of the cycle to assist in reducing the water temperature.

1.1 Intended use

Referring to the Installation and Maintenance Instructions, name-plate and Technical Information Sheet, check that the product is suitable for the intended use/application.

- i) The product has been specifically designed for use on steam or water/condensate. The products' use on other fluids may be possible but, if this is contemplated, Spirax Sarco should be contacted to confirm the suitability of the product for the application being considered.
- ii) Check material suitability, pressure and temperature and their maximum and minimum values. If the maximum operating limits of the product are lower than those of the system in which it is being fitted, or if malfunction of the product could result in a dangerous overpressure or overtemperature occurrence, ensure a safety device is included in the system to prevent such over-limit situations.
- iii) Determine the correct installation situation and direction of fluid flow.
- iv) Spirax Sarco products are not intended to withstand external stresses that may be induced by any system to which they are fitted. It is the responsibility of the installer to consider these stresses and take adequate precautions to minimise them.
- v) Remove protection covers from all connections and protective film from all name-plates, where appropriate, before installation on steam or other high temperature applications.

1.2 Access

Ensure safe access and if necessary a safe working platform (suitably guarded) before attempting to work on the product. Arrange suitable lifting gear if required.

1.3 Lighting

Ensure adequate lighting, particularly where detailed or intricate work is required.

1.4 Hazardous liquids or gases in the pipeline

Consider what is in the pipeline or what may have been in the pipeline at some previous time. Consider: flammable materials, substances hazardous to health, extremes of temperature.

1.5 Hazardous environment around the product

Consider: explosion risk areas, lack of oxygen (e.g. tanks, pits), dangerous gases, extremes of temperature, hot surfaces, fire hazard (e.g. during welding), excessive noise, moving machinery.

1.6 The system

Consider the effect on the complete system of the work proposed. Will any proposed action (e.g. closing isolation valves, electrical isolation) put any other part of the system or any personnel at risk?

Dangers might include isolation of vents or protective devices or the rendering ineffective of controls or alarms. Ensure isolation valves are turned on and off in a gradual way to avoid system shocks.

1.7 Pressure systems

Ensure that any pressure is isolated and safely vented to atmospheric pressure. Consider double isolation (double block and bleed) and the locking or labelling of closed valves. Do not assume that the system has depressurised even when the pressure gauge indicates zero.

1.8 Temperature

Allow time for temperature to normalise after isolation to avoid the danger of burns. **Warning:** The temperature set-point during the anti-legionella cycle will exceed normal operating temperatures and could cause scalding if water is used during the cycle. The cycle should only be initiated when it is safe to do so.

The water must also be drawn from the system at the end of the cycle to assist in reducing the water temperature trapped within the system.

1.9 Tools and consumables

Before starting work ensure that you have suitable tools and/or consumables available. Use only genuine Spirax Sarco replacement parts.

1.10 Protective clothing

Consider whether you and/or others in the vicinity require any protective clothing to protect against the hazards of, for example, chemicals, high/low temperature, radiation, noise, falling objects, and dangers to eyes and face.

1.11 Permits to work

All work must be carried out or be supervised by a suitably competent person. Installation and operating personnel should be trained in the correct use of the product according to the Installation and Maintenance Instructions.

Where a formal 'permit to work' system is in force it must be complied with. Where there is no such system, it is recommended that a responsible person should know what work is going on and, where necessary, arrange to have an assistant whose primary responsibility is safety.

Post 'warning notices' if necessary.

1.12 Handling

Manual handling of large and/or heavy products may present a risk of injury. Lifting, pushing, pulling, carrying or supporting a load by bodily force can cause injury particularly to the back. You are advised to assess the risks taking into account the task, the individual, the load and the working environment and use the appropriate handling method depending on the circumstances of the work being done.

Please note that if lifting straps are required we would recommend that they be fitted around the baffle plate legs to prevent damage to the unit.

2. General product information

2.1 General information

The Spirax EasiHeat HTG system uses steam to provide accurate heating of potable hot water or hot water for processes. Systems are supplied fully assembled and pressure tested ready for installation. and are supplied fully assembled and pressure tested ready for installation.

The Spirax EasiHeat HTG unit consists of the following core items (refer to Figure 1):

- A Plate heat exchanger.
- B Pneumatic or electrically actuated control valve and positioner.
- C PLC controller.
- D High limit isolation valve.
- E Condensate removal.



Fig. 1
Spirax EasiHeat HTG™ heat transfer solution

Notes:

1. For additional information about any particular product used in the construction of this unit see the relevant product specific Technical Information (TI) sheet.
2. For further technical information regarding the Spirax EasiHeat HTG see the Technical Information sheet TI-P481-11.

Spirax EasiHeat™ Heating Steam Side Control nomenclature

	Building heating unit	EHHSC = Spirax EasiHeat™ Heating Steam Side Control	EHHSC
	Control valve size	1 = 1" reduced trim 1.2 = Split range: 1" reduced trim & 1" 2 = 1" 2.2 = Split range: 1" & 1½" 3 = 1½" 3.2 = Split range: 1½" & 2" 4 = 2" 5 = 2½" 6 = 3"	2
Compulsory selection	Trim option	L = Low Noise	L
	Pressure vessel code	A = ASME	A
	Actuation	EL4 = Electric (SIMS) EL3 = Electric (SX90) PN = Pneumatic	EL4
	Condensate removal	PT = Pump trap PTHC = Pump trap high capacity ST = Steam trap	PT
	High limit	HL = High limit (SIMS) IHL = High limit (SX90)	HL
Mechanical options	High limit actuation EL only	B = Battery back-up	B
	Manual isolation valve	V1 = Ball valve V2 = Gate valve	V1
	Gasket material	G1 = EPDM	G1
	Extras	W = Wheels	W

Panel options	Panel type	T6 = 110V UL SIMS TOUCH P2 = SCREEN 110V UL PROCESS CONTROLLER	T6
	Energy monitoring	E = With energy monitoring	E
	Remote access	R1 = Level 1 - SMS Text and E-mail R2 = Level 2 - 3G web access R3 = Level 3 - Both of the above (R1+R2)	R2
Communication options		C1 = Modbus RTU C2 = BACnet MS/TP (RS485) *C3 = Modbus TCP/IP (Client) C4 = Profinet C5 = CanOPEN *C6 = BACnet TCP/IP (Client) C7 = Profibus RS485	C2
Options		O1 = Selected option 1 O2 = Selected option 2 O3 = Selected option 3	O1

* Note: not available when panel options R2 or R3 selected

How to order example

EHHSC	2	L	A	EL4	PT	-	HL	B	V1	G1	W	-	T6	E	R2	C1	O1
-------	---	---	---	-----	----	---	----	---	----	----	---	---	----	---	----	----	----

3. Installation

3.1 Steam and condensate connections

It is important that the steam supply (and compressed air if pneumatic actuation is selected) to the Spirax EasiHeat™ unit is supplied as dry and as clean as possible, in accordance with good steam engineering practice.

It should also be ensured that all connecting pipework is stress free and adequately supported.

The steam supply should always be maintained at the specified design pressure and temperature for the unit. The Spirax EasiHeat™ must not operate above the maximum steam pressure and temperature indicated on the name-plate attached to the plate heat exchanger. The installation of an appropriately sized safety valve, to protect any lower pressured equipment on either the hot or cold side of the plate heat exchanger, is strongly recommended.

Spirax Sarco supplies a range of traps, strainers, separators, safety valves and pressure reducing equipment.

3.2 Air supply

If a pneumatic control system is installed, connect a compressed air supply (65 to 116 psi g) to the pressure regulator mounted on the control valve.

3.3 Electrical supply

All electrical wiring and connections should be carried out in accordance with National Regulations.

A lockable isolator / switch disconnect should be fitted adjacent to the unit.

Mains supply is directly connected to the primary side of the incoming control panel isolator (shown with the IP2X cover removed) and main ground terminal as shown in Figure 2.

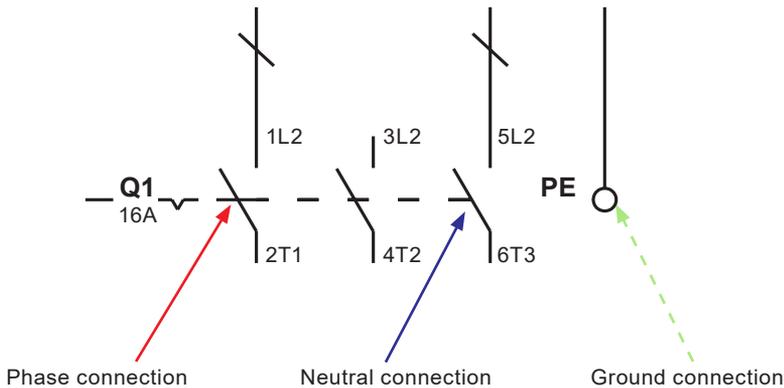


Fig. 2

3.4 Electrical specifications

Electrical supply: Refer to the name-plate on the unit

Control panel supply voltage	110 Vac/60 Hz
	240 Vac/50 Hz
Control panel load requirements	Internally fused at 5 amps
Electrical control actuator	24 Vac
	4 - 20 mA control
Pneumatic control actuator	-
	4 - 20 mA control
High limit isolation valve	24 Vac
PT100 temperature sensors	3 wire

Note: Power supply 10 - 16 A

3.5 Electrical connections

The following are available for customer connection to the Spirax EasiHeat system if required:

Volt free contacts

Terminal designation	Description	Type
X14	Enabled/running signal	1 x N/O contact
		1 x N/C contact
X15	High Limit alarm	1 x N/O contact
		1 x N/C contact
X16	Band Alarm	1 x N/O contact
		1 x N/C contact

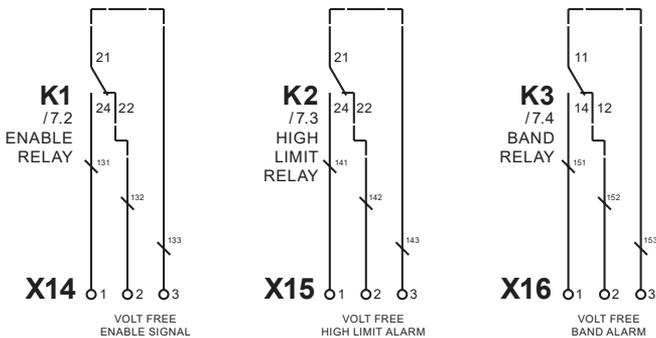


Fig. 3

Remote operation and retransmission connections

Terminal designation	Description	Type
X7	Remote set point	4-20 mA input
X17	Remote enable	24 Vdc signal
X9	Retransmission value	4-20 mA output

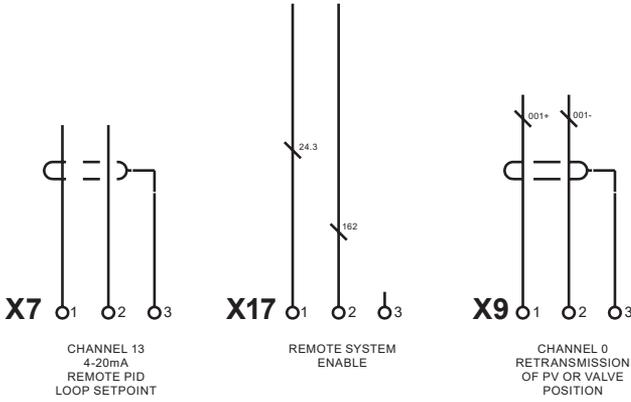


Fig. 4

Terminal layout overview

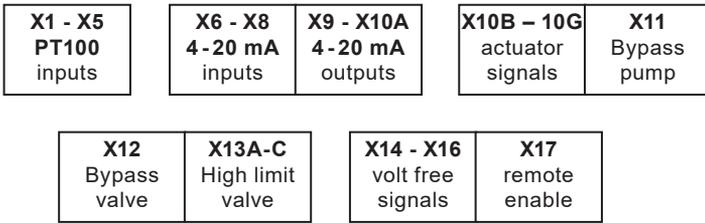


Fig. 5

Terminal layout detailed

Note: for detailed wiring schematic options please refer to the 'Operations manual'.

- | | |
|---|---|
| 1. Basic | Group X10B to X13C |
| 2. Independent high limit | X10B - Linear actuator closed signal |
| 3. Independent high limit with safety | X10C - Linear actuator supply voltage
(Linear actuator A - Electric actuator only) |
| 4. American standard | |
| X1 - Water temperature IN | X10D - Linear actuator B supply |
| X2 - Water temperature OUT | X10F - Positioner A DC supply |
| X3 - Make up water | X10G - Positioner B DC supply |
| X4 - Return water | X11 - Bypass pump |
| X5 - High limit temperature | X12 - Bypass valve |
| | X13 - High limit valve |
| Group X6 to X10A | X13A - High limit valve control output
signal |
| X6 - Linear actuator feedback | X13B - High limit valve supply voltage
(electric actuator only) |
| X7 - Remote PID loop set point | X13C - High limit valve battery signal |
| X8 - Steam meter | |
| X9 - Retransmission value | |
| X10A - Linear actuator control position | Group X14 to X17 |
| | X14 - Volt free signal for enabled |
| | X15 - Volt free high limit |
| | X16 - Volt free band alarm |
| | X17 - Remote enable signal |

4. Commissioning

We strongly recommend that you use the service and support of a Spirax Sarco commissioning engineer. Details of this service can be found by contacting Spirax Sarco.

Note: Pre commissioning requirements:

- In most new installations, dirt collects in the steam pipeline during construction of the system. It is essential to flush this out prior to commissioning.
- Ensure the secondary (cold side) of the system is charged and all air is bled from the system.
- Ensure that all main isolation valves for both steam and water are isolated.
- Ensure that the electrical supply to the Spirax EasiHeat is isolated.
- Double check that all steam, condensate and water connections are correctly connected to the Spirax EasiHeat.
- Check all flange bolts are tight.

4.1 Mechanical commissioning procedure:

- Check that all of the electrical connections are secure and as per the wiring diagram (Section 3.3, Figure 2).
 - Dry commissioning valve stroke check - An initial valve stroke check should be carried out to ensure free movement of the valve stem.
1. For the electric actuated control valve, use the manual override on top of the actuator to raise and lower the actuator spindle between the two travel indicators located on the side of the pillar (Figure 6).
 2. For the pneumatic actuated control valve, remove the existing air supply and connect an independent air supply to the actuator (pressure not to exceed 87 psi g), allow the valve to fully open, remove the air supply from the actuator allowing the valve to close. Reconnect the original pipework (Figure 7).

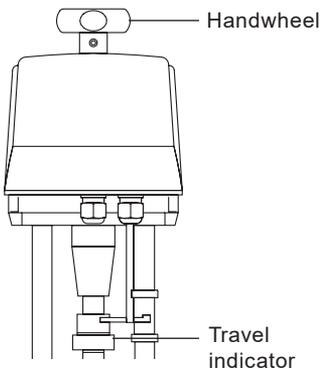


Fig. 6

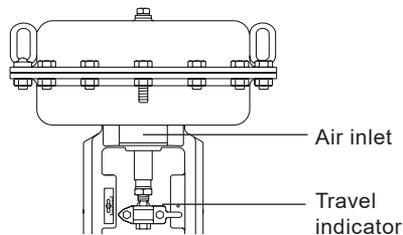


Fig. 7

- Open the secondary (cold side) isolating valves downstream of the Spirax EasiHeat.
- Start the main secondary water circulating pump(s) if fitted.
- Check and confirm there is secondary water circulation through the Spirax EasiHeat.
- If the circulation is okay, switch on the main power to the control panel (local isolator).
- Turn the control panel isolation switch to 'ON'.
- Follow the quick start-up guide (Section 4.2) before opening the steam isolations valves.

4.2 TVA quick commissioning:

The TVA flowmeter is factory set to display data in metric units (changeable to imperial if required by following the flow chart, Figure 10, or the individual product Installation and Maintenance Instructions (IMI)).

All commissioning of the TVA is through the arrow buttons located on the front display see Figure 8.

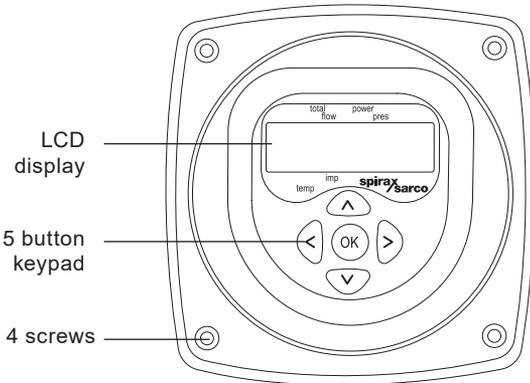


Fig. 8

Press and hold down the 'OK' button and hold for 3 seconds, then enter the default pass code.

Use the up and down arrows to set the number then press OK to confirm your selection, repeat until all numbers are entered.

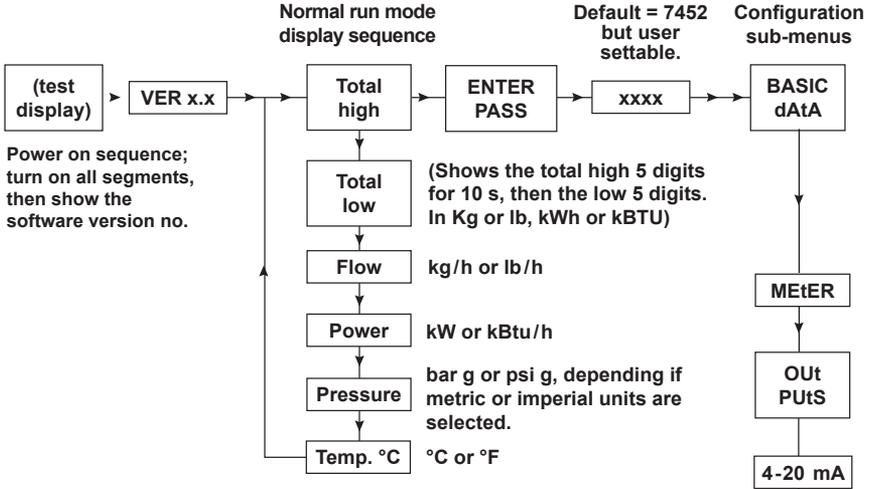


Fig. 9

TVA flowmeter commissioning chart

To navigate around the first level menu use the up and down arrows, to enter any sub menu use the right arrow.

Fig. 10 TVA configuration displays




Error Messages

These alternate with the normal run mode display. They will be prioritised and will be latched when they occur.

Pressing the 'OK' button will cancel the displayed alarm and allow the next one to be viewed.


A continuous alarm will re-occur on the display 2 seconds after it has been cancelled.

Power interrupted	POWER OUT	
No signal from sensor	NO SIGNAL	The 4-20 mA alarm can also be activated
Signal from sensor constant	SENSR CONST	The 4-20 mA alarm can also be activated
Flow above maximum	HIGH FLOW	Shows when flow i/p exceeds MAX A

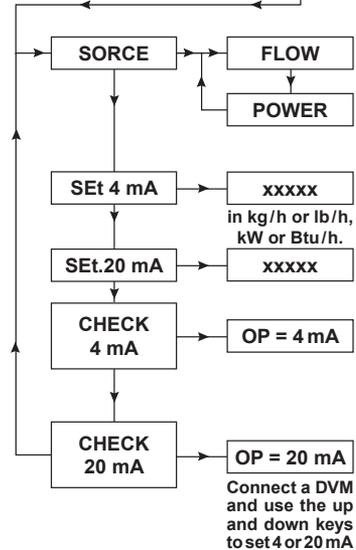

From the Basic dAtA menu navigate to OutPUTs and press the right arrow to enter the sub menu of 4 - 20 mA.

Fig. 11

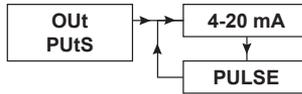

The next menu Sorce will need FLOW to be selected.

Obtain the correct flow data from the Spirax EasiHeat™ specification sheet supplied for accuracy, thereafter navigate down the menu and input: -

Minimum flow = 4 mA
 Maximum flow = 20 mA

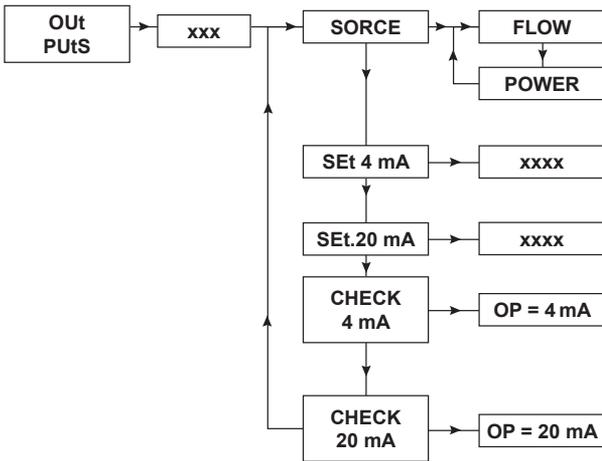


Fig. 12

After this data has been input, continually press the left arrow button to take you back to the run mode.

This completes the basic requirement for scaling of the TVA flowmeter suitable for integration with the HMI.

4.3 HMI quick start commissioning procedure:

The HMI display is a 7" touch screen, and the following procedures detail a basic set-up of the control system from initial power up. A more detailed description of each individual feature can be found in the full operation and maintenance manual.

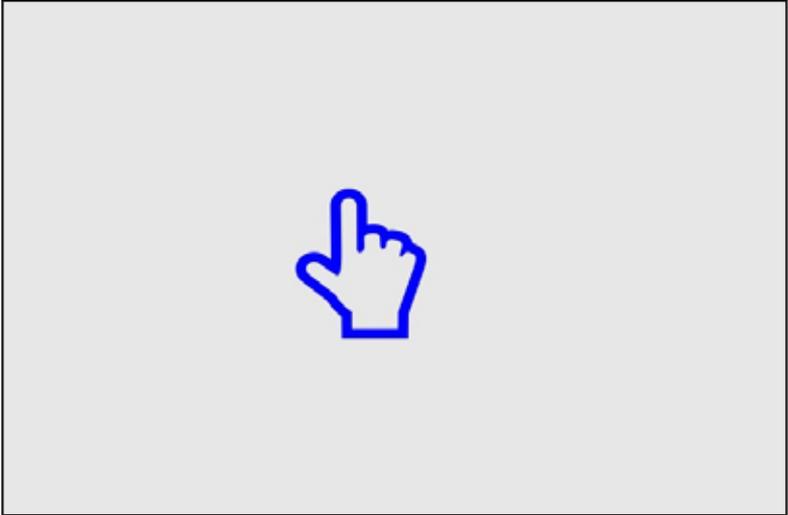


Fig. 13

When ready the above screen will appear, touch the screen. If the unit has not been configured for previous use following page will appear.

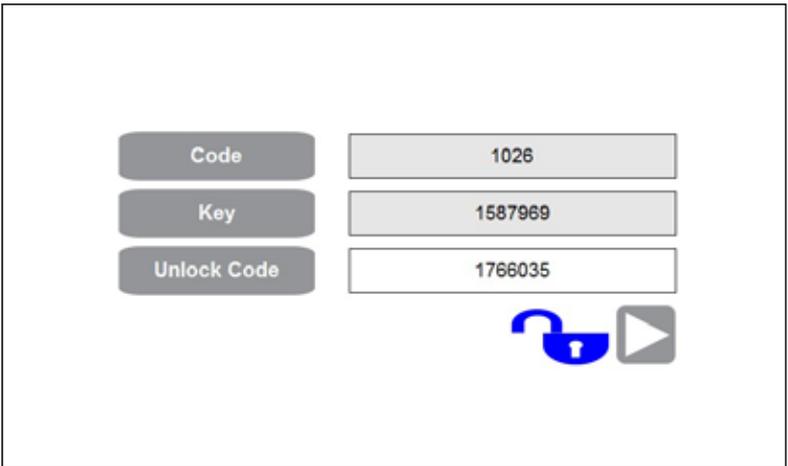


Fig. 14

To be able to move to next page the unlock code is essential, which can be found on the authentication certificate supplied with the panel. After entering the proper code, the lock and the continue button will appear when pressed and transfer you to the time/date setting page.

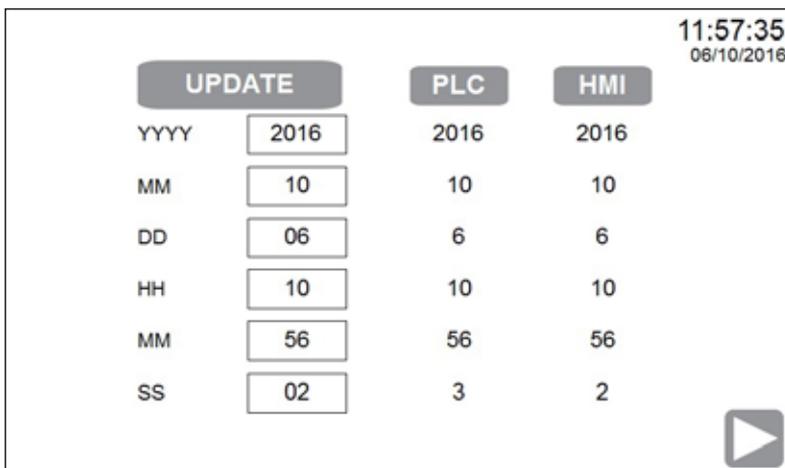


Fig. 15

After setting the time and date or if the unit has been returned to factory default the following four pages will appear (pre-configured for designated region):



Fig. 16

By choosing the relevant flag for your Country the common default engineering units and language will automatically be selected for that region. These values can be changed after the initial commissioning set-up procedure has been completed (see Section 4.3.3).

The system will advance automatically to allow the selection of the relevant Spirax EasiHeat unit - The type of Spirax EasiHeat unit that is available is dependent on the flag selection.

The next screen (Figure 17) requires confirmation of the system to be configured.

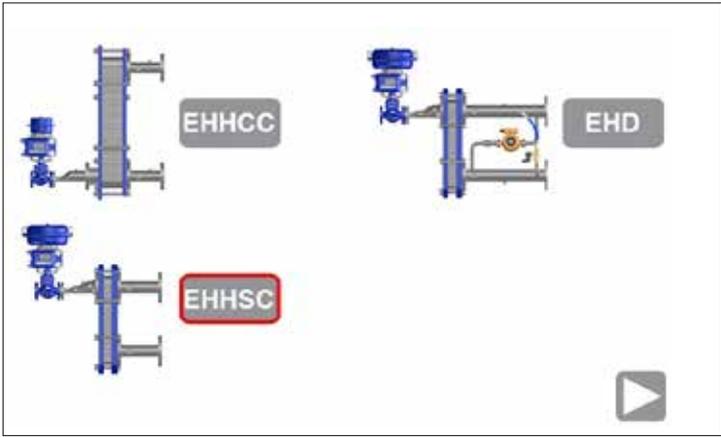


Fig. 17

Select the EHHSC option, the selection shall be confirmed by the icon becoming highlighted with a blue surround and a continue button shall be revealed.

Press the continue button to advance to the system configuration menu.

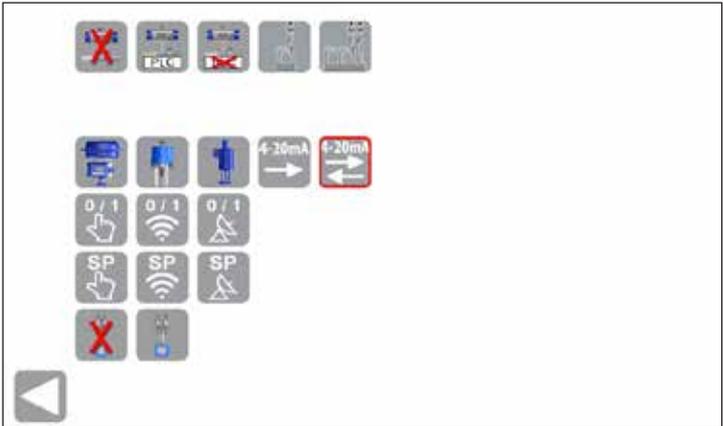


Fig. 18

The system configuration is now required to be entered on this page; again a selection is highlighted by a blue surround around the icon.

Note: dependant on selected configurable requirements some of the icons shown above will not be available.

Spirax EasiHeat mechanical and control system configuration options are detailed as follows:

Fig. 20 High-limit selection



Fig. 21 ¼ turn actuator selection

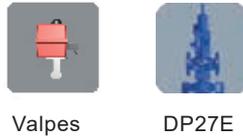


Fig. 22 Linear actuator selection



Fig. 23 Linear actuator control signals

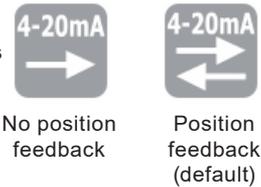


Fig. 24 Enable control selection



Local



Remote



Communications

Fig. 25 PID set point selection



Local



OWC



Local
set point



Remote
set point

EasiHeat selected

The system configuration is now complete and the continue navigation button at the right-base of the screen can be used to navigate to the next page which is the Start Page (Figure 8 - Blue hand).

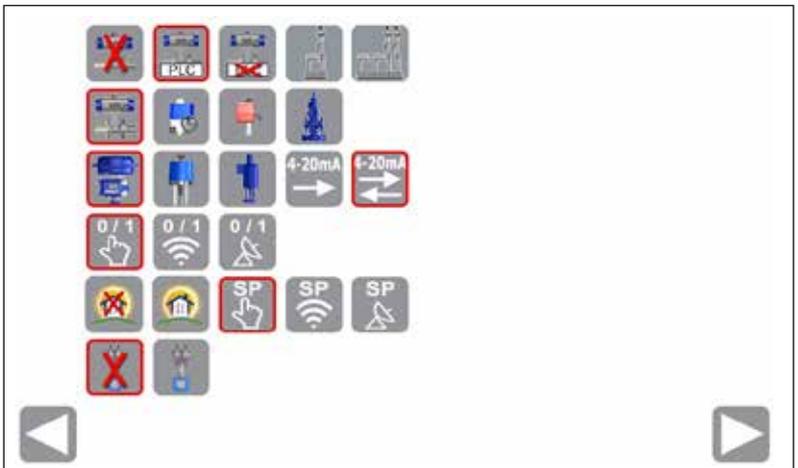


Fig. 26

A continue button will appear after system configuration which will navigate to the logged energy data for the Spirax EasiHeat™ system.

Press the continue button to navigate to the energy set up page.

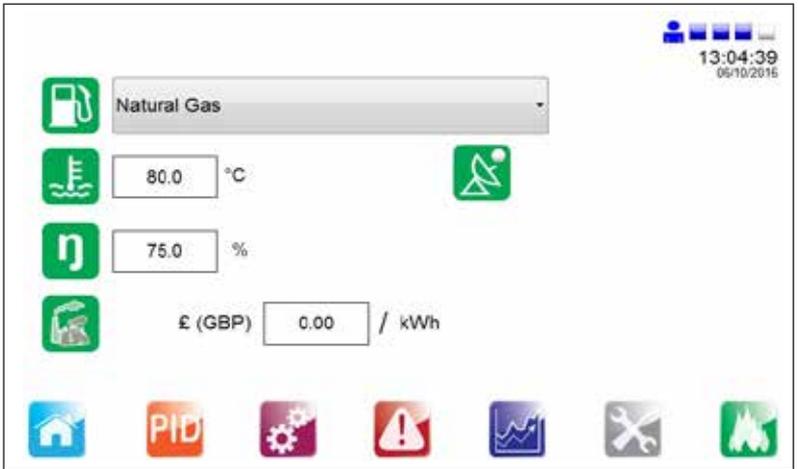


Fig. 29

Accurately enter specific energy data to ensure valid energy data can be calculated.



Boiler fuel properties - Selected via the drop down menu



Boiler feedwater temperature



Boiler efficiency



Cost per unit of fuel



Override energy set points with BACnet set points

In addition enter the custom fuel set points by selecting the custom fuel type.

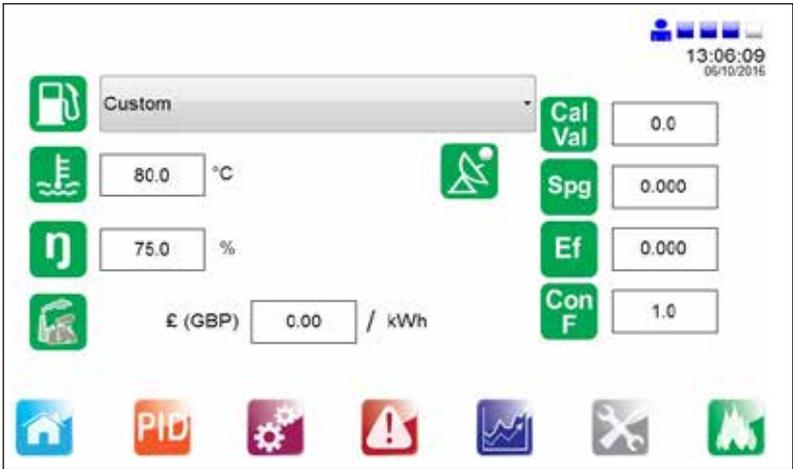


Fig. 30

Custom fuel parameters to be set:



Fuel calorific value



Fuel specific gravity



Fuel emission factor



Fuel conversion heat factor

Energy setting will not affect control process, to obtain correct values of the calculated energy, the accurate data settings are essential.

4.5 Global navigation buttons



Home
mimic



PID
set points



Settings
menu



Alarms
menu



Historical
trends



Service
menu



4.5.1 Home mimic

This button will always navigate you back to the overview of the Spirax EasiHeat system that has been selected and configured.

From this home screen the overall status and control of the Spirax EasiHeat systems operation can be performed, depending on the security level access.

Note: access level 1 has view access to screens and limited change permissions. Level 2 (engineers) access provides a greater accessibility to make adjustments to the system settings. The screen shots from this point onwards refer to level 2 access.

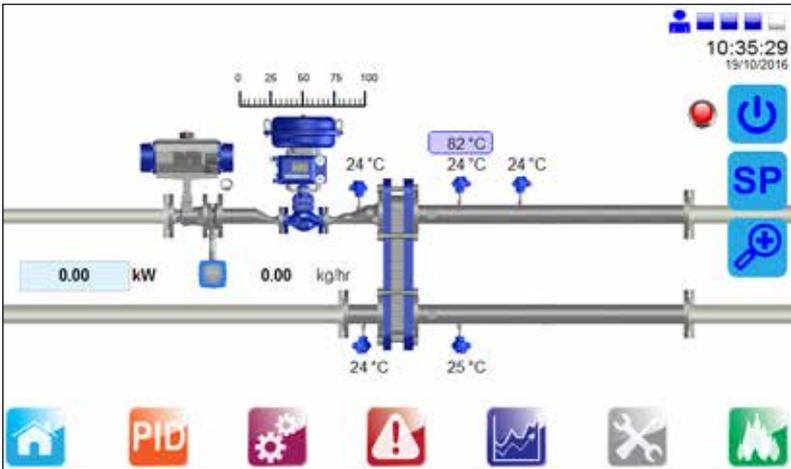


Fig. 32

In case of configuring unit as a SRDHW the following mimic will be used, which contains two linear actuator valves.

Images shown below are dialogue pages that are only available for engineers access, which allow control over the valves and pumps, it is possible to enter those dialogs by pressing the screen surface at one of the unit devices (valves or pump). We are able to set the operation mode AUTO or MANUAL in which we are able to start/stop the pump or open/close the valves.

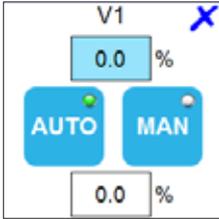


Fig. 33

V1 dialog page contains two value fields, the top one shows the actual valve position, and the bottom one can be used to move the valve to requested position in manual mode.



Automatic mode



Manual mode

The light indicator shows which mode is selected.



PID set point

This pop-up menu, depending on the configuration, allows users to either set the local temperature set point or view the remote or BACnet temperature set point and enter the Spirax EasiHeat system PID associated ramp up and ramp down time bases. If the configuration were set to BACnet, it is possible to override the configuration and change it to local enable.

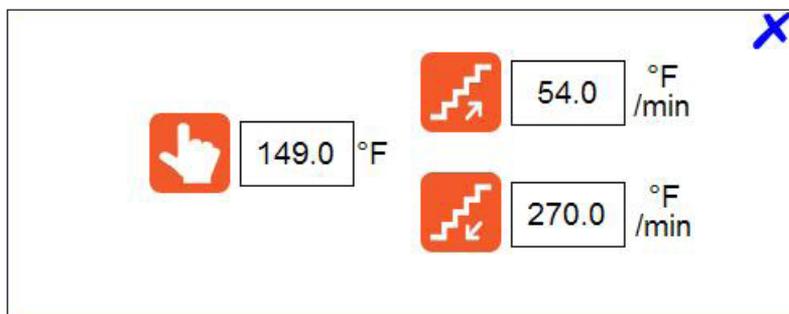


Fig. 34



Local temperature set point



Remote temperature set point
(DHW and SRDHW only)



BACnet temperature set point (DHW or SRDHW only) remote



Ramp-up temperature set point



Ramp-down temperature set point



BACnet temperature set point override with local temperature
set point (DHW or SRDHW and BACnet selection only)



Enable control

This pop-up menu depending on the configuration, allows the user to select one of three control modes for the Spirax EasiHeat or view the remote or BACnet enable status. If the configuration were set to BACnet, it is possible to override the configuration and change it to local enable configuration.


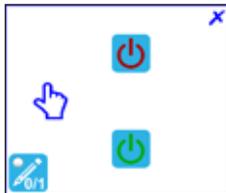


Fig. 35



Spirax EasiHeat OFF mode

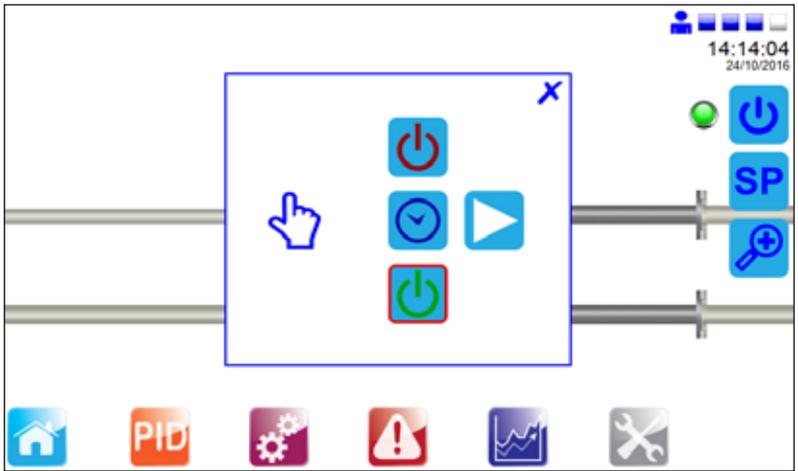

Remote or Communications EasiHeat enable



Spirax EasiHeat ON mode



Communications EasiHeat™ enable override with local Spirax EasiHeat™ enable (Communications selection only)



Zoom

The zoom pop-up provides a more detailed view of the key process parameters.

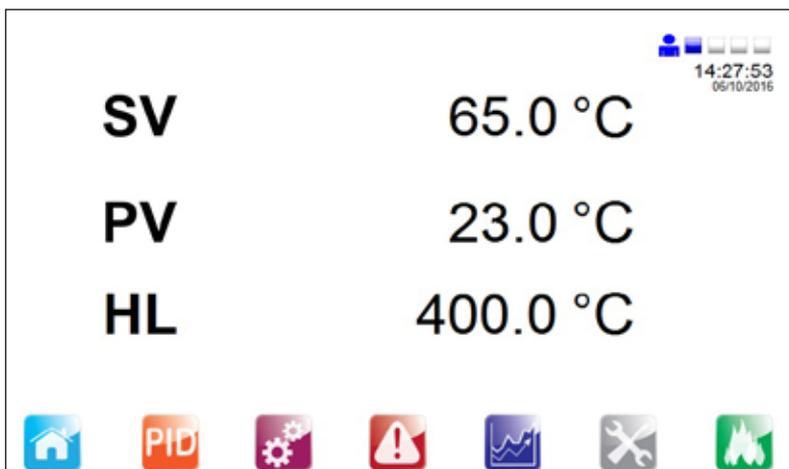


Fig. 36



4.3.2 PID set points

This page allows setting of the PID control factors (entries available only for engineers). Press on the white data box to make changes



Fig. 37



Proportional band (P factor of the PID control)



Desired value (local, remote or BACnet set point)



Proportional gain (P factor of the PID control)



Current value of the controlled variable (T2 temperature)



Integral factor (I factor of the PID control)



Manipulated value (valve position request)



Derivative factor (D factor of the PID control)



PID real time trend page (Allows to configure the PID set points with view of the actual signals)

The following screen is accessible from above PID Loop Set Points page (available only for engineers). We are able to switch between proportional band and proportional gain. Trend shows us PID loop real time responses. The SV, PV and CV values at PID Real Time Trend are scaled to percent.



Fig. 38



4.3.3 Settings menu

The settings displayed (with blue surround) are default settings after the country flag has been selected, changes can be made if required.



Fig. 39



Time / date configuration page



Language selection page



Temperature units selection

There is also the possibility of changing the language (from the pre-configured options) by using the following selection menu without affecting the engineering units:



Fig. 40

In addition, engineers are able to set or change the actual time and date for PLC and HMI.

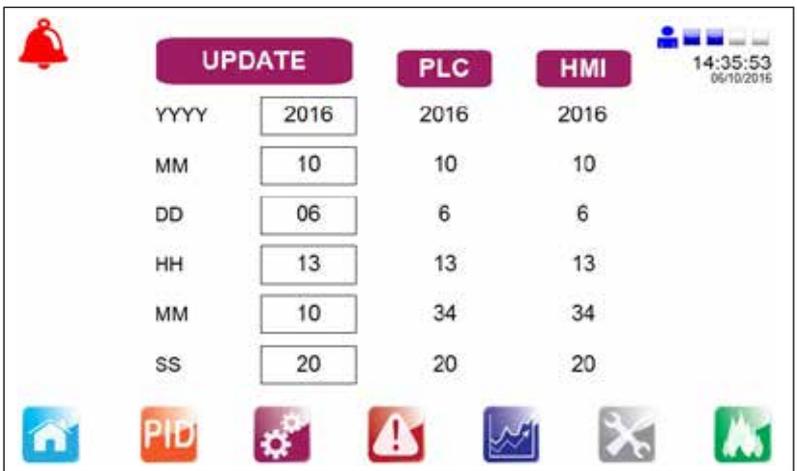


Fig. 41



4.3.4 Alarms menu

The following page shows all active alarms, an active alarm is indicated on all the mimic screens via the alarm bell in the top left hand corner of the screen.



Fig. 42

There are also navigations to further alarm set point pages as well as the historical alarm list, located on the right of the display. Press each of them to view or alter.



High-limit alarm set point
(PLC controlled only)



High-limit temperature set point

High-limit temperature mask time



Band alarm

A screenshot of a control panel interface. It features three rows of setpoint fields. Each row consists of a red square icon on the left and a white rectangular input field on the right. The first row has a waveform icon and the value '18.0 °F'. The second row has a clock icon and the value '2 secs'. The third row has a red circle with a white 'R' icon and the value '5 secs'. A blue 'X' icon is located in the top right corner of the panel area.

Band alarm temperature set point

Band alarm delay time set point

Band alarm reset time set point



Reset high-limit alarm latch
(PLC controlled high-limit only)



Historical alarm page

Alarm Time	Description	Alarm State
06/10/2016 10:04:19	V1 Position 4 - 20mA Under Range	Not Triggered
06/10/2016 10:04:19	TSI independent High Limit Alarm	Not Triggered
06/10/2016 10:18:46	TS High Limit Alarm	Triggered
06/10/2016 10:18:47	TS High Limit Alarm	Not Triggered
06/10/2016 10:18:47	TSI independent High Limit Alarm	Triggered
06/10/2016 10:18:50	V1 Position 4 - 20mA Under Range	Triggered
06/10/2016 10:54:29	V1 Position 4 - 20mA Under Range	Not Triggered
06/10/2016 10:54:29	TSI independent High Limit Alarm	Not Triggered
06/10/2016 11:00:46	TS High Limit Alarm	Triggered
06/10/2016 11:01:20	TS High Limit Alarm	Not Triggered
06/10/2016 11:01:20	TSI independent High Limit Alarm	Triggered

Fig. 43



Alarms indication icon



Manual alarm indication icon



Caution - high-limit setting:

- Care should be taken to ensure sufficient difference between the process set point and the high-limit set point, to avoid any unwanted high limit tripping.
- Check temperature rises to set value and controls satisfactorily.
- If necessary adjust PID settings. We would strongly recommend that only a suitably trained controls engineer adjust these parameters.
- Check operation of condensate removal system.



4.3.5 Trend menu

This menu provides historical trend monitoring of the process values, useful for analysing the historical reactions of the Spirax EasiHeat system to process conditions.

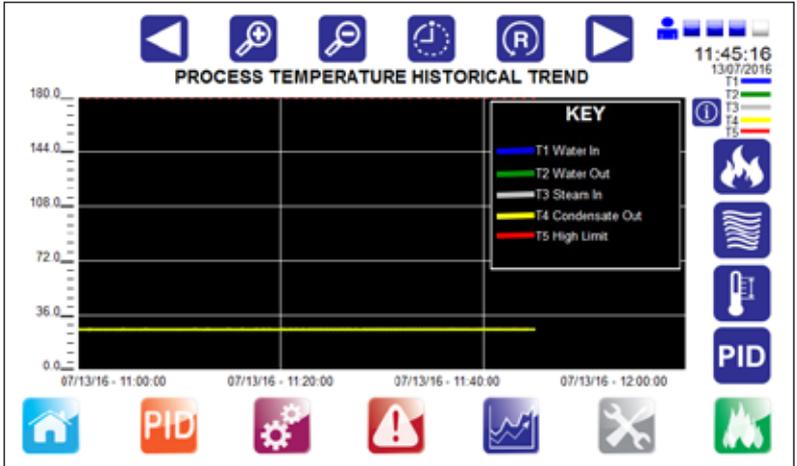


Fig. 44



Scroll trend left



Zoom in trend



Zoom out trend



Move trend to actual position



Refresh trend



Scroll trend right



Temperature trend page button



PID process trend page button



4.3.6 Service menu

The following page provides service information and allows engineering level users to navigate to pages containing process information.

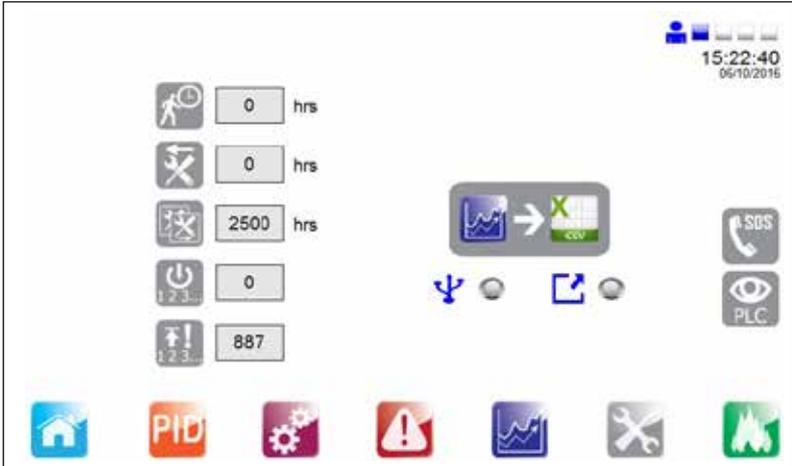


Fig. 45



Save trends to USB memory stick.



This LED if green confirms that the memory stick is connected and the data format is correct (FAT32 only allowed).



This LED is switched on only during the trend dump, do not remove the memory stick before it is switched off or data may be lost.

Note: Depending on the amount of data to be dumped can take several minutes).



Total unit runtime



Time lapsed since last service



Next service due at number of hours



Process enable event count



High-limit event count



Local Spirax Sarco engineer contact details dialog page



Hardware monitoring pages (input/output overview)



Restore saved set points



4.3.7 Hardware monitoring

The following pages provide only an overview of the input and outputs; it is not possible to set any set points.



Fig. 46

Figures 47, 48, 49 and 50 display the analogue input and output values.



Fig. 47
CPU

Fig. 48
Digital input



Fig. 49
Analogue inputs

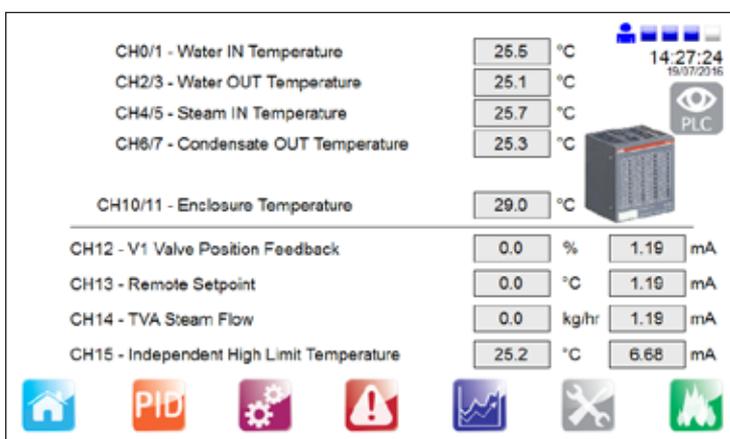


Fig. 50
Analogue retransmission outputs





Local Spirax Sarco engineer contact details dialog page

✕

Please Contact your local Spirax Sarco Agent, this can be found at www.spiraxsarco.com

Agent Name:

Spirax Sarco, Inc

Telephone:

(803) 714 2000

Fig. 51



4.5.8 Energy pages

Energy monitoring pages provide the user access to view the total value of the power and carbon use, total of CO₂ emission and calculated total cost of energy that has been used. By pressing the green field underneath the 'Total Between Two Dates' allows two dates to be set for the total to be calculated between.

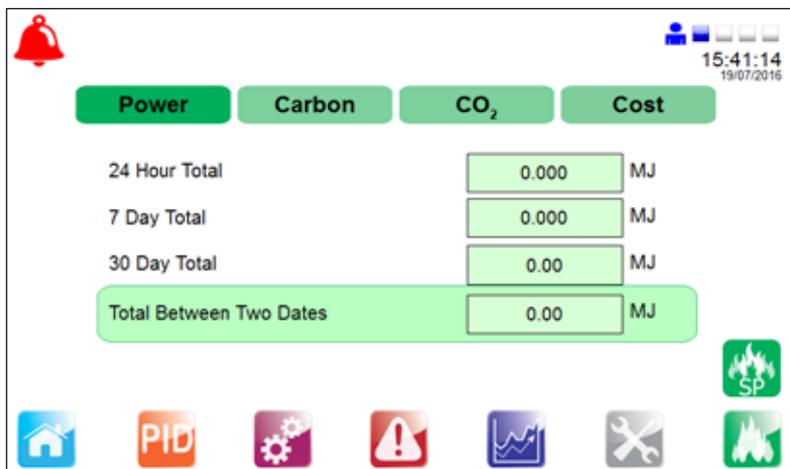


Fig. 52



Energy monitoring set points page

At engineer level it is possible to access the energy page to make changes by pressing the energy monitoring set point. This will go to the energy page.

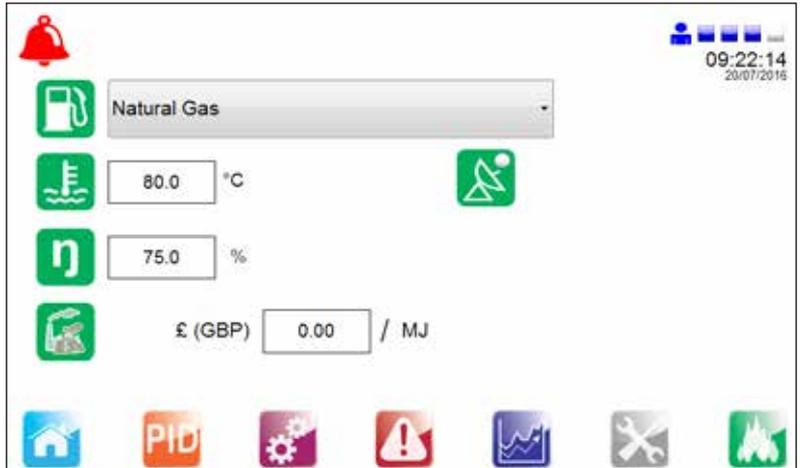


Fig. 53

To finalise the mechanical commissioning of the system:

- Open all condensate drain valves.
- Slowly open the steam inlet valve.
- Monitor the process temperature to ensure that it is within the acceptable limits.

The Spirax EasiHeat™ unit is now ready for service.

5. Fault finding

Fault	Possible cause	Remidial action
Unit does not power up	Loss of incoming supply	Check incoming supply
	Internal fuse blown	Check all mains fuses F1 - F4 and Control fuses AF1, CF1 - CF7
Loss of 24 Vdc supply	Internal fuse blown	Check all mains fuses F1 - F3 and Control fuses CF1 - CF7
	Field wiring fault	Sequentially disconnect the field wiring for all 24 Vdc supplies to see if supply is restored
Loss of 24 Vac supply	Internal fuse blown	Check all mains fuses F1 and F2 and Control fuses AF1
PT100 signal not reading correctly (T1 - T5)	Field wiring fault	Check termination of 3 wire PT100 terminats (X1 - X5) and PT100 head
	Faulty PT100	Check compensated resistance
Bypass pump does not operate	Field wiring fault	Check wiring of pump to terminals X11
	Internal fuse blown	Check mains fuse F4
Bypass valve does not operate	Field wiring fault	Check wiring of bypass valve to terminals X12
	Check setting of deviation alarm on HMI	Ensure not to set 0, the setting should be 35.6F
Remote set point is not showing correctly	Scaling value incorrect	Ensure that the minimum and maximum engineering units from the remote set point match those on the HMI (this data is found on the Spirax Sarco engineers 4-20 mA page)
	Polarity of 4-20 mA incorrect	Reverse polarity and wire as per electrical drawings

6. Maintenance

Note: Before actioning any maintenance observe the 'Safety information' in Section 1.

6.1 General

For maintenance of the individual components that make up the system, please see the relevant product specific IMI's for the components concerned.

6.2 High limit device testing

The purpose of the test is to ensure that the system operates satisfactorily when required to do so.

Method:

1. High limit set point test - The set point of the high limit controller should be lowered, to simulate a high temperature situation. Test personnel should ensure the high limit device operates in a satisfactory manner.

2. Electrical power failure test - The unit should be turned off at the PLC controller switch to simulate power failure. Examination should be made to ensure the high limit system has switched to its fail-safe mode, isolating the primary steam supply.

Frequency

It is essential that a competent person tests the high limit device on a frequent basis. Intervals between tests should not exceed a six month period.

We do not recommend the installation of a self-acting high limit control to the Spirax EasiHeat system.

6.3 Scale formulation

Within open systems, where there is continual make-up water, there is a risk of scale formation. The extent of the scale will depend largely upon the water quality, which varies greatly from area to area. A test, conducted by a water treatment specialist, is recommended to determine the local water quality and whether problems are foreseen.

After extended service, the plate heat exchanger can be easily dismantled for cleaning. If scale becomes a persistent problem, regular chemical cleaning should be considered. ¾" ports are available on the secondary inlet and outlet piping to allow easy connection for CIP 'Clean in Place' apparatus. It should be noted that raising the steam pressure could result in an increase of scaling.

For additional technical information, contact:
Spirax Sarco Applications Engineering Department

Spirax Sarco, Inc. • 1150 Northpoint Blvd. • Blythewood, SC 29016
Phone 1-800-883-4411 • www.spiraxsarco.com/global/us