





TP1, TP2, TP3, Temporary Cone, Flat shaped Strainers and Spacer Ring


Installation and Maintenance Instructions

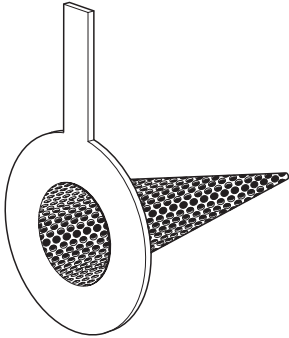


TP1
Conical

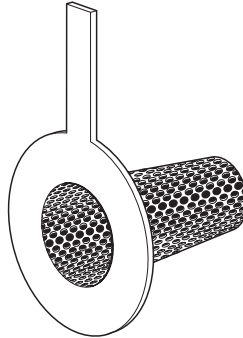

TP2
Truncated conical

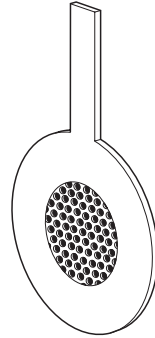

TP3
Flat screen

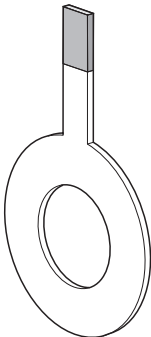

**Spacer
Ring**

1. Safety information
2. General product information
3. Installation and commissioning
4. Operation and fault finding

1. Safety information

Safe operation of this product can only be guaranteed if it is properly installed, commissioned, used and maintained by qualified personnel (see Section 1.11) in compliance with the operating instructions. General installation and safety instructions for pipeline and plant construction, as well as the proper use of tools and safety equipment must also be complied with.

1.1 Intended use

Referring to these Installation and Maintenance Instructions, Marking on the product and Technical Information Sheet, check that the product is suitable for the intended use/application.

- i) These products have been specifically designed for use on steam, air or condensate/water. The products' use on other fluids may be possible but, if this is contemplated, Spirax Sarco should be contacted to confirm the suitability of the product for the application being considered.
- ii) Check material suitability, pressure and temperature and their maximum and minimum values. If the maximum operating limits of the product are lower than those of the system in which it is being fitted, or if malfunction of the product could result in a dangerous overpressure or overtemperature occurrence, ensure a safety device is included in the system to prevent such over-limit situations.
- iii) Determine the correct installation situation and direction of fluid flow.
- iv) Spirax Sarco products are not intended to withstand external stresses that may be induced by any system to which they are fitted. It is the responsibility of the installer to consider these stresses and take adequate precautions to minimise them.

1.2 Access

Ensure safe access and if necessary a safe working platform (suitably guarded) before attempting to work on the product. Arrange suitable lifting gear if required.

1.3 Lighting

Ensure adequate lighting, particularly where detailed or intricate work is required.

1.4 Hazardous liquids or gases in the pipeline

Consider what is in the pipeline or what may have been in the pipeline at some previous time. Consider: flammable materials, substances hazardous to health, extremes of temperature.

1.5 Hazardous environment around the product

Consider: explosion risk areas, lack of oxygen (e.g. tanks, pits), dangerous gases, extremes of temperature, hot surfaces, fire hazard (e.g. during welding), excessive noise, moving machinery.

1.6 The system

Consider the effect on the complete system of the work proposed. Will any proposed action (e.g. closing isolation valves, electrical isolation) put any other part of the system or any personnel at risk?

Dangers might include isolation of vents or protective devices or the rendering ineffective of controls or alarms. Ensure isolation valves are turned on and off in a gradual way to avoid system shocks.

1.7 Pressure systems

Ensure that any pressure is isolated and safely vented to atmospheric pressure. Consider double isolation (double block and bleed) and the locking or labelling of closed valves. Do not assume that the system has depressurised even when the pressure gauge indicates zero.

1.8 Temperature

Allow time for temperature to normalise after isolation to avoid danger of burns.

1.9 Tools and consumables

Before starting work ensure that you have suitable tools and/or consumables available. Use only genuine Spirax Sarco replacement parts.

1.10 Protective clothing

Consider whether you and/or others in the vicinity require any protective clothing to protect against the hazards of, for example, chemicals, high/low temperature, radiation, noise, falling objects, and dangers to eyes and face.

1.11 Permits to work

All work must be carried out or be supervised by a suitably competent person.

Installation and operating personnel should be trained in the correct use of the product according to the Installation and Maintenance Instructions.

Where a formal 'permit to work' system is in force it must be complied with. Where there is no such system, it is recommended that a responsible person should know what work is going on and, where necessary, arrange to have an assistant whose primary responsibility is safety.

Post 'warning notices' if necessary.

1.12 Handling

Manual handling of large and/or heavy products may present a risk of injury. Lifting, pushing, pulling, carrying or supporting a load by bodily force can cause injury particularly to the back. You are advised to assess the risks taking into account the task, the individual, the load and the working environment and use the appropriate handling method depending on the circumstances of the work being done.

Warning - Never handle a Fig TP1 or Fig TP2 temporary cone shaped strainer by the screen.

1.13 Residual hazards

In normal use the external surface of the product may be very hot. If used at the maximum permitted operating conditions the surface temperature of some products may reach temperatures of 400 °C (752 °F).

Many products are not self-draining. Take due care when dismantling or removing the product from an installation (refer to 'Maintenance instructions').

1.14 Freezing

Provision must be made to protect products which are not self-draining against frost damage in environments where they may be exposed to temperatures below freezing point.

1.15 Disposal

Unless otherwise stated in the Installation and Maintenance Instructions, this product is recyclable and no ecological hazard is anticipated with its disposal providing due care is taken.

1.16 Returning products

Customers and stockists are reminded that under EC Health, Safety and Environment Law, when returning products to Spirax Sarco they must provide information on any hazards and the precautions to be taken due to contamination residues or mechanical damage which may present a health, safety or environmental risk. This information must be provided in writing including Health and Safety data sheets relating to any substances identified as hazardous or potentially hazardous.

2. General product information


2.1 General description

Temporary strainers have been designed to fit between two flanges and are generally used during commissioning and start-up to remove any coarse debris. They are available in three designs (TP1, TP2 and TP3 as illustrated in Figure 1) to suit a wide range of fluids for applications in process lines, hot water systems, steam and condensate systems etc. The standard screens are manufactured using 304L or 316L stainless steel and have 3 mm perforations. Other perforations or material of construction are available on request.

Temporary strainers are not intended to be used for permanent applications.

Contact Spirax Sarco when permanent applications are required. After commissioning and start-up the temporary strainer should be removed from the pipeline and replaced with a spacer ring.

Standards

These products fully comply with the requirements of the European Pressure Equipment Directive 97/23/EC and carry the  mark when so required.

Certification

These products are available with certification to EN 10204 3.1 and NACE Approval.

Note: All certifications/inspections requirements must be stated at the time of order placement.

Note: For additional data see the following Technical Information Sheets: TI-P169-06.

2.2 Sizes and pipe connections

DN40 - DN700 (1½" - 28")

Designed for installation between the following flanges:

EN 1092 PN10, PN16, PN25 and PN40 or


ASME 150, ASME 300 and ASME 600

2.3 Optional extras

The following optional extras are available for all unit sizes at an extra cost and must be stated at the time of order placement:

Perforations	3 mm (standard), 1.6 mm and 6 mm Contact Spirax Sarco for availability of perforations not displayed.
Mesh	M40, M100 and M200 Contact Spirax Sarco for availability of mesh screens not displayed.
Screen material	AISI 304L (standard), AISI 316L and Monel 400
Specific surface finish for collar	Ra 0.025 µm to 50 µm

TP1, TP2, TP3, Temporary Cone, Flat shaped Strainers and Spacer Ring

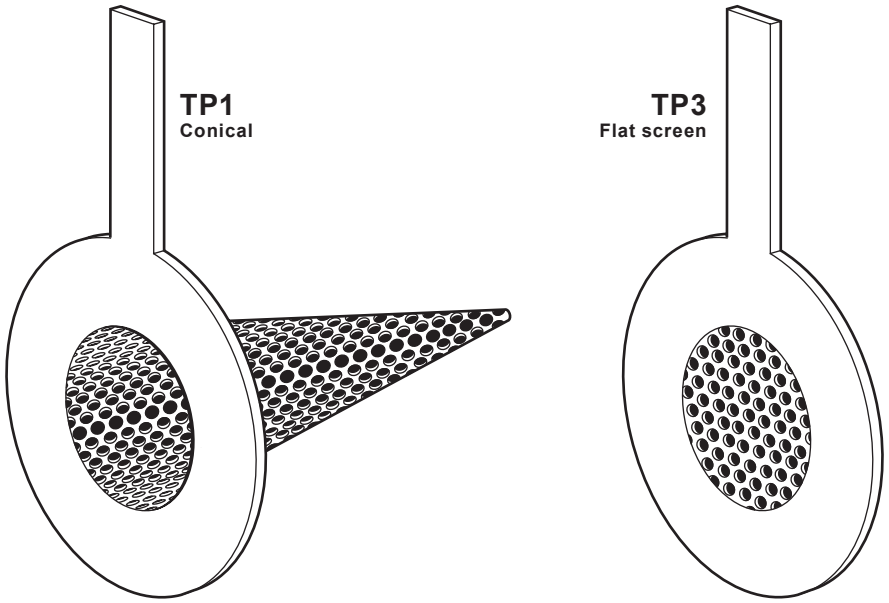

Please note: The spacer ring handle is painted blue to differentiate it from a TP type temporary strainer when fitted between the flanges on the pipeline.

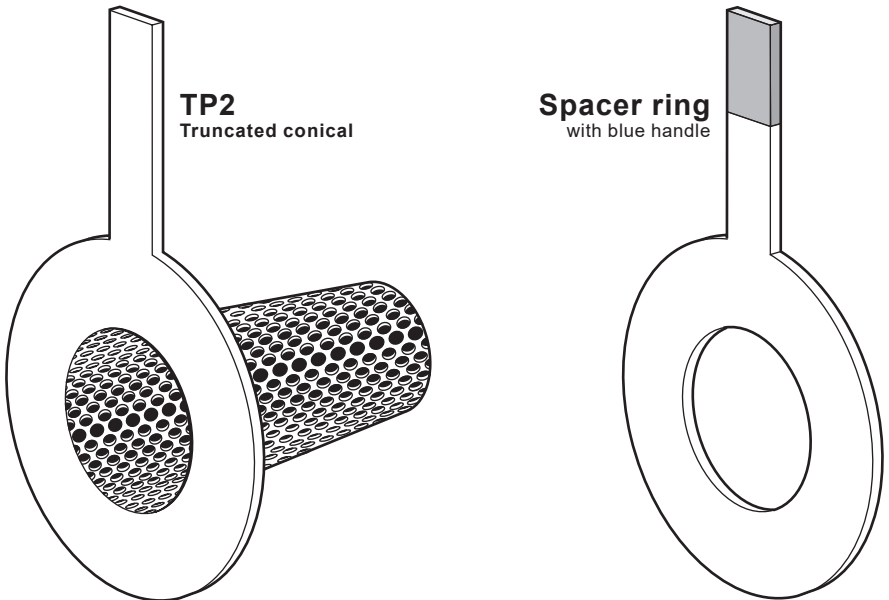


Fig. 1
TP1, TP2, TP3 temporary cone, flat shaped strainers and spacer ring

TP1, TP2, TP3, Temporary Cone, Flat shaped Strainers and Spacer Ring

2.4 Dimensions / weights (approximate) in mm and kg

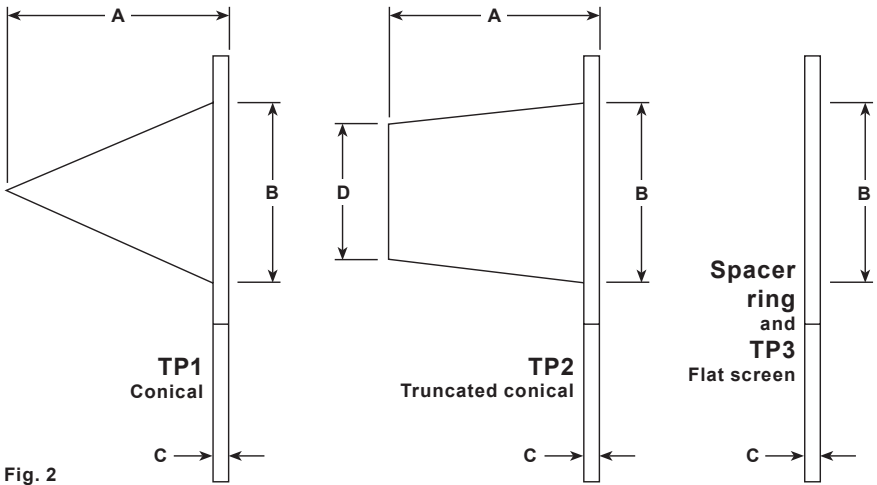


Fig. 2

Size	A 100% = Standard unit			B	C	D
	(100%)	(150%)	(200%)			
DN40 - 1½"	50	100	140	31	2	20
DN50 - 2"	68	115	150	44	2	32
DN65 - 2½"	88	140	180	56	2	38
DN80 - 3"	108	165	230	67	2	50
DN100 - 4"	140	215	290	88	2	65
DN125 - 5"	173	268	355	117	2	83
DN150 - 6"	210	330	430	139	2	105
DN200 - 8"	282	430	585	181	3	145
DN250 - 10"	355	535	685	228	3	185
DN300 - 12"	427	635	825	276	3	225
DN350 - 14"	477	660	890	320	3	260
DN400 - 16"	558	750	990	368	5	300
DN450 - 18"	670	840	1120	415	5	345
DN500 - 20"	704	940	1245	466	5	380
DN600 - 24"	848	1120	1475	568	5	460
DN700 - 28"	993	1538	2072	686	5	550

TP1, TP2, TP3, Temporary Cone, Flat shaped Strainers and Spacer Ring

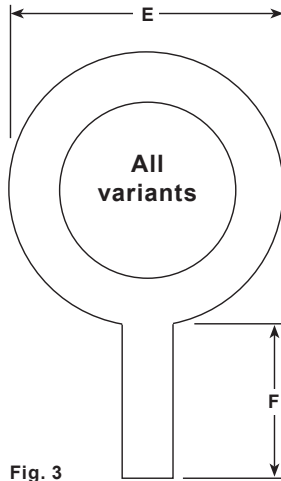


Fig. 3

Size	E							F	Weight *	
	PN10	PN16	PN25	PN40	ASME 150	ASME 300	ASME 600		PN	ASME
DN40 - 1½"	88	88	88	88	80	90	90	102	0.30	0.24
DN50 - 2"	102	102	102	102	98	105	105	102	0.38	0.30
DN65 - 2½"	122	122	122	122	117	124	124	102	0.45	0.40
DN80 - 3"	138	138	138	138	130	143	143	102	0.65	0.60
DN100 - 4"	158	158	162	162	168	175	187	102	1.00	0.60
DN125 - 5"	188	188	188	188	191	210	235	127	1.30	1.10
DN150 - 6"	212	212	218	218	216	245	260	127	2.00	1.60
DN200 - 8"	268	268	278	285	275	302	314	127	3.60	2.80
DN250 - 10"	320	320	335	345	333	356	394	153	5.00	3.90
DN300 - 12"	370	378	395	410	403	416	450	153	6.50	5.30
DN350 - 14"	430	438	450	465	445	479	486	153	8.40	6.40
DN400 - 16"	482	490	505	535	508	533	560	153	11.80	9.20
DN450 - 18"	532	550	555	560	543	591	605	203	12.40	11.60
DN500 - 20"	585	610	615	615	600	648	675	203	14.60	13.50
DN600 - 24"	685	725	720	735	711	768	784	203	20.30	18.60
DN700 - 28"	800	795	820	840	800	800	800	203	27.80	26.00

* Please note: Weights displayed are approximate and only applicable for the TP1 and TP2

TP1, TP2, TP3, Temporary Cone, Flat shaped Strainers and Spacer Ring

3. Installation and commissioning

Note: Before actioning any installation observe the 'Safety information' in Section 1.

Referring to the installation and Maintenance Instructions, name-plate and Technical Information Sheet, check that the product is suitable for the intended installation:

3.1 Check materials, pressure and temperature and their maximum values. If the maximum operating limit of the product is lower than that of the system in which it is being fitted, ensure that a safety device is included in the system to prevent overpressurisation.

3.2 Determine the correct installation situation and the direction of fluid flow.


3.3 Temporary strainers can be fitted in either a horizontal or vertical line.
Note: Flanges, bolts (or studs), nuts and joint gaskets are to be supplied by the installer.

3.4 TP type temporary strainers and spacer ring simply fit between two pipe flanges (see Figure 4). A standard gasket is required on both sides of the strainer collar together with longer bolts or studs.

Note: Flanges, bolts (or studs), nuts and joint gaskets are to be supplied by the installer. Normal sensible flange bolting practice should be followed e.g.: torque tightening the bolts in opposite sequence.

After installation or maintenance ensure that the system is fully functional. Carry out tests on any alarms or protective devices.

Please note: A **blue handle** will denote that a spacer ring is fitted.

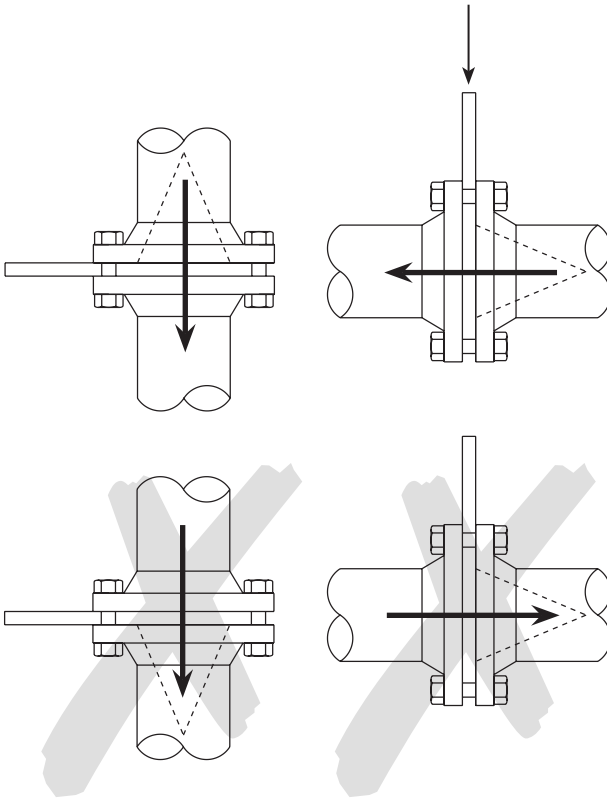

Caution: There is mesh and a differential pressure within the application

Fig. 4

4. Operation and fault finding

Temporary strainers are passive items that will prevent the onward movement of dirt and debris which is larger than the holes in the screen.

The pressure drop across the temporary strainer will increase as the screen becomes blocked.

The resistance of the screen will depend on the fluid and the pressure going through the system.

Do not fit a temporary strainer as a permanent fitment without first consulting asking Spirax Sarco.

The maximum differential pressure possible is dependant on the system conditions.

Fault finding

Symptom	Possible cause	Remedy
No flow through strainer	Blocked screen	Clean or replace screen
	System is isolated	Check isolation valves
Increased pressure drop across strainer	Screen is blocked up	Clean or replace screen